

# **MOD-SIX**

## **Nixie Clock System**

### **User's Guide**

**August, 2015**

This manual describes the installation and operation of the MOD-SIX Nixie Clock System.

**Revision/Update Information:** This is a revised manual

**Clock Firmware:** V08-08

**GPS Repeater-Next Firmware:** V36

**Keyfob Firmware:** V14

<http://www.badnixie.com>

---

**26 August 2015**

This document may be freely copied provided it is not modified. For permission to distribute modified versions of this document, contact the author.

**CAUTION:** This clock makes use of high voltages within the case. Never attempt to operate the clock with the cover removed.

The information in this document is subject to change without notice and should not be construed as a commitment by the authors. The authors make no representations or warranties with respect to the contents or function of this document and specifically disclaim any implied warranties of merchantability or fitness for any particular purpose.

Haicom is a trademark of Haicom Electronics Corp.

Wi-Fi is a trademark of the Wi-Fi Alliance.

Bluetooth is a registered trademark of the Bluetooth Special Interest Group.

Swiffer is a registered trademark of Procter & Gamble.

NOVUS is a registered trademark of NOVUS, Inc.

Radio Shack is a registered trademark of Technology Properties, Inc.

eBay is a registered trademark of eBay, Inc.

This document incorporates materials from H Carl Ott and Michael Barile.

---

# Contents

---

PREFACE	xi
<hr/>	
CHAPTER 1 INTRODUCTION AND PACKAGE CONTENTS	1-1
<hr/>	
CHAPTER 2 UNPACKING AND INSTALLING THE CLOCK	2-1
<hr/>	
2.1 THE CLOCK COVER AND BASE	2-1
<hr/>	
2.2 INSTALLING THE TUBES	2-2
<hr/>	
2.3 INSTALLING THE COVER	2-5
<hr/>	
2.4 CONNECTING POWER AND STARTING THE CLOCK	2-5
<hr/>	
2.5 THE GPS REPEATER (OPTIONAL)	2-6
2.5.1 Connecting power and starting the GPS repeater	2-6
<hr/>	
2.6 THE GPS RECEIVER (OPTIONAL)	2-7
<hr/>	
2.7 A WORD ABOUT OPTIONS	2-9
<hr/>	
2.8 IMPORTANT NOTES	2-9
2.8.1 High voltages and general safety	2-9
2.8.2 Intermittent GPS reception	2-9
2.8.3 Buzzing noises	2-9
2.8.4 "Cathode poisoning"	2-10
<hr/>	
2.9 GENERAL CARE AND MAINTENANCE	2-10

## Contents

---

<b>CHAPTER 3 CONFIGURATION OPTIONS</b>	<b>3-1</b>
<b>3.1 THE CONTROL KNOB</b>	<b>3-1</b>
<b>3.2 QUICK-SET MODE</b>	<b>3-1</b>
<b>3.3 THE MAIN MENU</b>	<b>3-2</b>
<b>3.3.1 TIME</b>	<b>3-2</b>
<b>3.3.2 DAY</b>	<b>3-2</b>
<b>3.3.3 FONT</b>	<b>3-2</b>
<b>3.3.4 DATE</b>	<b>3-3</b>
<b>3.3.5 MONTH</b>	<b>3-3</b>
<b>3.3.6 YEAR</b>	<b>3-3</b>
<b>3.3.7 DIM</b>	<b>3-3</b>
<b>3.3.8 BRIGHT</b>	<b>3-3</b>
<b>3.3.9 LVLSET</b>	<b>3-3</b>
<b>3.3.10 DOT MD</b>	<b>3-4</b>
<b>3.3.11 AM/PM</b>	<b>3-4</b>
<b>3.3.12 XFADE</b>	<b>3-4</b>
<b>3.3.13 DATEMD</b>	<b>3-4</b>
<b>3.3.14 DATDLY</b>	<b>3-4</b>
<b>3.3.15 DATSCR</b>	<b>3-4</b>
<b>3.3.16 YEAR D</b>	<b>3-5</b>
<b>3.3.17 DAY D</b>	<b>3-5</b>
<b>3.3.18 12/24</b>	<b>3-5</b>
<b>3.3.19 LZ SUP</b>	<b>3-5</b>
<b>3.3.20 LDRTST</b>	<b>3-5</b>
<b>3.3.21 FNTCAT</b>	<b>3-5</b>
<b>3.3.22 TUBETM</b>	<b>3-6</b>
<b>3.3.23 GPSMNU</b>	<b>3-6</b>
<b>3.3.24 SYSMNU</b>	<b>3-6</b>
<b>3.3.25 TMRRMNU</b>	<b>3-6</b>
<b>3.3.26 DSTMNU</b>	<b>3-6</b>
<b>3.3.27 LNKMNU</b>	<b>3-6</b>
<b>3.3.28 DIMMNU</b>	<b>3-6</b>
<b>3.3.29 METMNU</b>	<b>3-6</b>
<b>3.3.30 WRDMNU</b>	<b>3-7</b>
<b>3.3.31 PROFLE</b>	<b>3-7</b>
<b>3.3.32 EXIT</b>	<b>3-7</b>
<b>3.4 THE GPS SUB-MENU</b>	<b>3-7</b>

---

<b>3.4.1</b>	<b>GPS MD</b>	_____	<b>3-7</b>
<b>3.4.2</b>	<b>TMZONE</b>	_____	<b>3-7</b>
<b>3.4.3</b>	<b>TWEAK</b>	_____	<b>3-7</b>
<b>3.4.4</b>	<b>ULCK I</b>	_____	<b>3-8</b>
<b>3.4.5</b>	<b>ULCKTM</b>	_____	<b>3-8</b>
<b>3.4.6</b>	<b>TRKTOL</b>	_____	<b>3-8</b>
<b>3.4.7</b>	<b>SNCMSG</b>	_____	<b>3-8</b>
<b>3.4.8</b>	<b>INIT</b>	_____	<b>3-9</b>
<b>3.4.9</b>	<b>RETURN</b>	_____	<b>3-9</b>
<hr/>			
<b>3.5</b>	<b>THE SYSTEM SUB-MENU</b>	_____	<b>3-9</b>
<b>3.5.1</b>	<b>QWKSEL</b>	_____	<b>3-9</b>
<b>3.5.2</b>	<b>UI TMR</b>	_____	<b>3-9</b>
<b>3.5.3</b>	<b>DSPFNT</b>	_____	<b>3-10</b>
<b>3.5.4</b>	<b>SEGTST</b>	_____	<b>3-10</b>
<b>3.5.5</b>	<b>LED MD</b>	_____	<b>3-10</b>
<b>3.5.6</b>	<b>SECNDS</b>	_____	<b>3-10</b>
<b>3.5.7</b>	<b>MSGS</b>	_____	<b>3-11</b>
<b>3.5.8</b>	<b>SCRLSP</b>	_____	<b>3-11</b>
<b>3.5.9</b>	<b>SCRLXF</b>	_____	<b>3-11</b>
<b>3.5.10</b>	<b>PWMVAL</b>	_____	<b>3-11</b>
<b>3.5.11</b>	<b>ENCDIR</b>	_____	<b>3-11</b>
<b>3.5.12</b>	<b>RTCAGE</b>	_____	<b>3-11</b>
<b>3.5.13</b>	<b>EXP MD</b>	_____	<b>3-12</b>
<b>3.5.14</b>	<b>RETURN</b>	_____	<b>3-12</b>
<hr/>			
<b>3.6</b>	<b>THE TIMER SUB-MENU</b>	_____	<b>3-12</b>
<b>3.6.1</b>	<b>TMR MD</b>	_____	<b>3-12</b>
<b>3.6.2</b>	<b>TM1OFF</b>	_____	<b>3-12</b>
<b>3.6.3</b>	<b>TM1 ON</b>	_____	<b>3-13</b>
<b>3.6.4</b>	<b>TM2OFF</b>	_____	<b>3-13</b>
<b>3.6.5</b>	<b>TM2 ON</b>	_____	<b>3-13</b>
<b>3.6.6</b>	<b>MON - SUN</b>	_____	<b>3-13</b>
<b>3.6.7</b>	<b>QWKSET</b>	_____	<b>3-13</b>
<b>3.6.8</b>	<b>RETURN</b>	_____	<b>3-13</b>
<hr/>			
<b>3.7</b>	<b>THE DST SUB-MENU</b>	_____	<b>3-13</b>
<b>3.7.1</b>	<b>DST MD</b>	_____	<b>3-14</b>
<b>3.7.2</b>	<b>B TIME</b>	_____	<b>3-14</b>
<b>3.7.3</b>	<b>B MNTH</b>	_____	<b>3-14</b>
<b>3.7.4</b>	<b>B NTH</b>	_____	<b>3-14</b>
<b>3.7.5</b>	<b>B DAY</b>	_____	<b>3-14</b>

## Contents

3.7.6	E TIME	3-14
3.7.7	E MNTH	3-14
3.7.8	E NTH	3-14
3.7.9	E DAY	3-14
3.7.10	OFFSET	3-15
3.7.11	RETURN	3-15
<hr/>		
3.8	THE RF LINK (RADIO) SUB-MENU	3-15
3.8.1	RFCHAN	3-15
3.8.2	RFBAUD	3-15
3.8.3	FOB MD	3-15
3.8.4	ADDR	3-15
3.8.5	RETURN	3-16
<hr/>		
3.9	THE DIMMED DISPLAY SUB-MENU	3-16
3.9.1	DATE	3-16
3.9.2	SECNDS	3-16
3.9.3	DOT MD	3-16
3.9.4	LED MD	3-16
3.9.5	MET	3-16
3.9.6	WORDS	3-16
3.9.7	RETURN	3-17
<hr/>		
3.10	THE METROLOGY (SENSOR) SUB-MENU	3-17
3.10.1	MET MD	3-17
3.10.2	F/C	3-17
3.10.3	HG/MB	3-17
3.10.4	BTREND	3-17
3.10.5	S1 LBL	3-18
3.10.6	T1 CAL	3-18
3.10.7	H1 CAL	3-18
3.10.8	B1 CAL	3-18
3.10.9	S2 LBL	3-18
3.10.10	S3 LBL	3-18
3.10.11	S4 LBL	3-19
3.10.12	CLKSTA	3-19
3.10.13	H SUFF	3-19
3.10.14	HEAR D	3-19
3.10.15	DSPDLY	3-19
3.10.16	RETURN	3-20
<hr/>		
3.11	THE RANDOM WORD SUB-MENU	3-20

3.11.1	WRD MD	3-20
3.11.2	NWORDS	3-20
3.11.3	LEXICN	3-20
3.11.4	DIRTY	3-20
3.11.5	EFFECT	3-20
3.11.6	LETDLY	3-21
3.11.7	SEGDLY	3-21
3.11.8	WRDDLY	3-21
3.11.9	BKENDS	3-21
3.11.10	RETURN	3-21
<hr/> 3.12 RESTORING DEFAULT SETTINGS		3-21
<hr/> <b>CHAPTER 4 THE GPS REPEATER (OPTIONAL)</b>		4-1
4.1	GPS REPEATER PAIRING	4-2
4.1.1	Pairing overview	4-2
4.1.2	Pairing procedure	4-2
4.1.3	Notes on pairing	4-3
4.1.4	Hints to improve range	4-3
<hr/> <b>CHAPTER 5 THE KEYFOB (OPTIONAL)</b>		5-1
5.1	KEYFOB PAIRING	5-2
5.1.1	Pairing overview	5-2
5.1.2	Pairing procedure	5-2
5.2	KEYFOB ADDRESS	5-3
5.3	KEYFOB TEST MODE	5-3
5.4	KEYFOB USES	5-4
5.4.1	Bedside remote control	5-4
5.4.2	"Valet Mode" in a display case	5-4

## Contents

---

<b>CHAPTER 6 FONTS</b>	<b>6-1</b>
6.1     QUICK SELECTION OF FONTS	6-1
6.2     THE FONT CATALOG	6-1
6.2.1     STNDRD	6-1
6.2.2     ALIEN	6-2
6.2.3     STINGY	6-2
6.2.4     OUTLND	6-2
6.2.5     STOLEN	6-3
6.2.6     GRUNGE	6-3
6.2.7     WITHER	6-3
6.2.8     SKEWED	6-4
6.2.9     NICE 1	6-4
6.2.10     DECO 1	6-4
6.2.11     7 SEG	6-5
6.2.12     B7971	6-5
6.2.13     MIRROR	6-5
6.2.14     TILTNE	6-6
6.2.15     TILTSW	6-6
6.2.16     TILTNW	6-6
6.2.17     TILTSE	6-7
6.2.18     TRIANG	6-7
6.2.19     SKEWUP	6-7
<b>CHAPTER 7 TECHNOLOGY AND HISTORY</b>	<b>7-1</b>
7.1     NIXIE TUBES IN GENERAL	7-1
7.2     THE TUBES IN THIS CLOCK	7-1
7.3     OTHER TECHNOLOGY	7-3
<b>CHAPTER 8 "GEEK" STUFF</b>	<b>8-1</b>
8.1     THE GPS REPEATER	8-1

---

---

8.2	ENVIRONMENTAL SENSORS	8-1
8.3	POWER-ON SEGMENT TEST	8-1
8.4	SERVICE INFORMATION	8-2
<hr/> <b>APPENDIX A DEFAULT CONFIGURATION OPTIONS</b>		<b>A-1</b>
<hr/> <b>APPENDIX B GPS INITIALIZATION STRINGS</b>		<b>B-1</b>
<hr/> <b>APPENDIX C OPERATING MULTIPLE CLOCKS</b>		<b>C-1</b>
C.1	MULTIPLE CLOCKS, MULTIPLE GPS REPEATERS	C-1
C.2	MULTIPLE CLOCKS, SINGLE GPS REPEATER	C-1
C.2.1	Notes on the single repeater configuration	C-2
C.2.2	Using keyfobs with multiple clocks and a single repeater	C-2
<hr/> <b>APPENDIX D CONFIGURING TIMER MODE</b>		<b>D-1</b>
D.1	OFFICE USE, 9 TO 5 WEEKDAYS ONLY	D-1
D.2	OFFICE USE, 9 TO 5 WEEKDAYS, 10 TO 2 SATURDAYS	D-2
D.3	HOME USE, OFF WHEN AT WORK	D-2
<hr/> <b>APPENDIX E A NOTE ABOUT DISPLAY SEQUENCE AND OVERCROWDING</b>		<b>E-1</b>

## Contents

---

### FIGURES

1-1	Clock base and cover with shipping inserts	1-2
1-2	Other clock components (some Optional)	1-2
2-1	Clock base with cardboard shipping inserts	2-1
2-2	Tube socket showing keyed pin	2-3
2-3	Tubes installed in sockets	2-4
2-4	Power connector location	2-5
2-5	GPS connector on clock	2-8
4-1	GPS repeater top view	4-1
5-1	Keyfob	5-1
7-1	Newspaper advertisement from January, 1966	7-2
7-2	A LECTRASCAN display frame with 48 tubes	7-2

---

# Preface

This manual explains how to install and use the MOD-SIX Nixie Clock System.

---

## Intended Audience

This manual is intended for all clock users. It describes the unpacking, installation, and configuration of the clock as well as providing a history of the tubes used in the clock.

---

## Important Cautions

**DO NOT** operate the clock without the cover in place - hazardous voltages are present at some locations on the circuit boards when the clock is operating.

The tubes are extremely fragile and expensive (over \$100 each). Use extreme care when unpacking them from the shipping materials and installing them in the clock. **NEVER** ship the clock with the tubes installed.

**DO NOT** interchange the two antenna connectors on the optional GPS repeater. While both connectors have the same thread, they have very different functions and swapping the antennas will at a minimum cause the GPS repeater to not operate properly and may damage the GPS repeater if connected improperly and left powered on for an extended period.

Like all electronic devices, the clock can be damaged by static electricity. When installing the clock or changing settings, always touch the aluminum base plate first to discharge any static.

---

## Useful Web Sites

- MOD-6 Google Group: [http://groups.google.com/group/mod-6\\_7971](http://groups.google.com/group/mod-6_7971)
- BadNixie: <http://www.badnixie.com>
- The Vintage Technology Association: <http://www.decadecounter.com>

---


## Conventions

In this document, the following conventions will be used:

- **For future use** is used to describe some items in this manual. The presence of "For future use" material in this manual does not indicate that the functions or options are available, nor imply any promise that they will be offered at any point in the future.
- **Clock** refers to the MOD-SIX Nixie Clock base / electronics, tubes, and acrylic cover as an assembled unit.

- **GPS repeater** refers to the optional separate square module which connects to the GPS antenna and contains the environmental sensors and a short-range radio transmitter.
- **GPS receiver** refers to the optional small device which performs the task of receiving the GPS signals from the satellites and converting them into an industry-standard format.
- **Keyfob** refers to the optional handheld remote control.
- UPPERCASE words generally refer to menu options, described in detail in Section 3.3

## Introduction and package contents

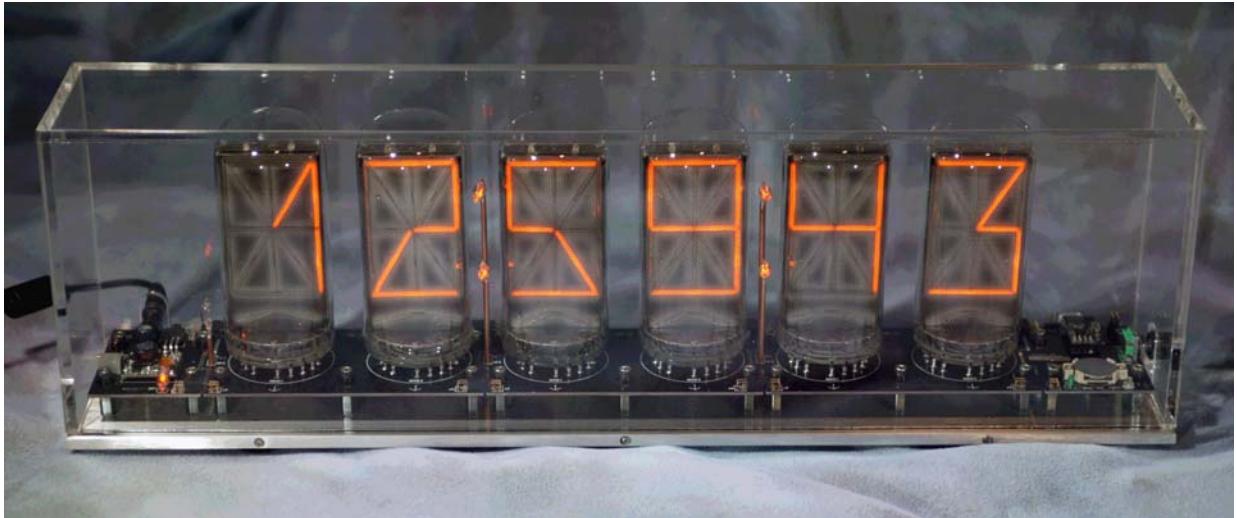

This chapter describes the MOD-SIX Nixie Clock System package contents so you will know what to expect when you unpack it in the next chapter.

**Note:** The following applies to the assembled version of the clock. Refer to the separate assembly instructions if you purchased the clock as a kit. Certain items, such as the GPS repeater and its power adapter, may not be included with your clock, depending on the option(s) you ordered.

The package contains:

- This manual
- Clock base with circuit boards and colon towers
- Clear acrylic clock cover (taped to clock base)
- AC adapter for clock (round connector)
- AC adapter for GPS repeater (rectangular connector) (Optional)
- GPS repeater with radio and GPS antennas (Optional)
- Keyfob (Optional)

You will also need:


- 6 B-7971 Nixie tubes
- Plug adapter(s) if you are outside the US
- USGlobalSat BR-355 or Haicom™ HI-204 III GPS receiver (Optional, only if you are not using the GPS repeater)
- PS/2-style GPS extension cable (Optional)

## Introduction and package contents

- Cotton gloves to avoid getting fingerprints on the tubes and cover  
(Optional)

**Figure 1–1 Clock base and cover with shipping inserts**

---

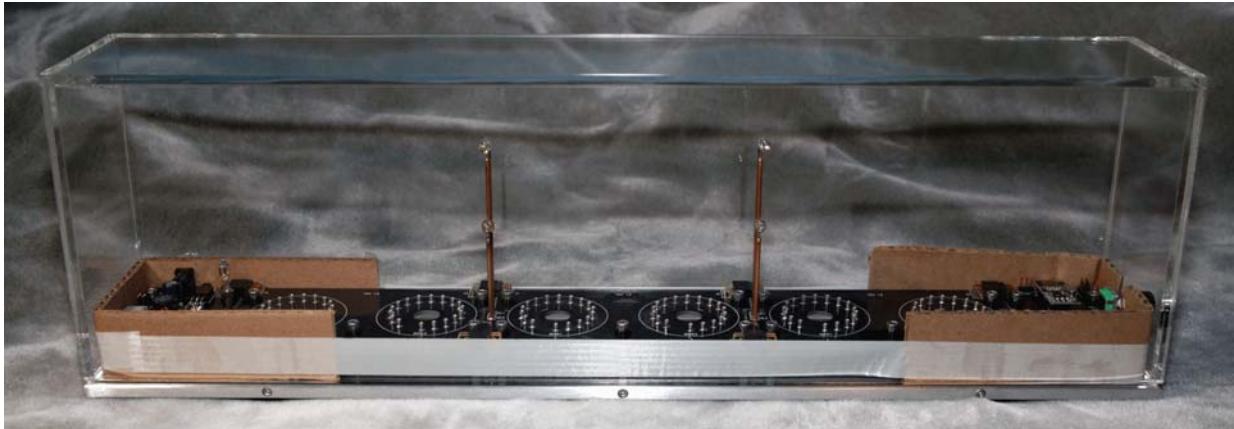

**Figure 1–2 Other clock components (some Optional)**

---



**Note:** The AC adapter(s) shipped with your clock may appear slightly different than the ones shown in the picture.

---

## 2

# Unpacking and installing the clock

This chapter provides information necessary to install the clock system. Please read these instructions completely before proceeding with unpacking and setup.

Unpack each item carefully, as described below, and verify that all items are present and undamaged. In particular, take care to put the tubes somewhere where they won't roll off and break.

## 2.1 The clock cover and base

The clock cover is shipped on top of the clock base / circuit boards. It is wrapped in protective foam. Peel the tape bands off the foam. Do **NOT** use a sharp object such as a razor blade or scissors to cut the tape as you may cut through the foam and scratch the plastic cover.

Fold the protective foam back, remove the cover and set it aside for now. Lift the clock out of the foam by the base and set the foam aside. Retain all packing materials in case you ever need to return anything (or in case you move).

If there is a strip of tape holding the battery in the socket on the right-hand side, remove it. Be careful to not pop the battery out of its socket when removing the tape. If the battery is removed, the clock's configuration settings will be lost and you'll have to re-enter them.

Carefully remove the tape that holds the two U-shaped cardboard shipping inserts in place and lift the inserts off of the clock base. Be careful not to get the cardboard caught on the control knob on the right side of the clock.

**Figure 2–1 Clock base with cardboard shipping inserts**



## Unpacking and installing the clock

Inspect the small neon lamps (on the copper rods) for any misalignment that may have occurred during shipping. You can carefully reposition the lamps on the end of the rods if needed. If the copper rods are bent, be very careful when trying to straighten them.

### 2.2

## Installing the tubes

**Note: Tubes are not supplied with the clock and must be purchased separately elsewhere.**

The tubes are nearly 50 years old and have been in and out of equipment. This will likely have caused the pins to become misaligned, so you can't simply push a tube into a socket on the clock - you'll need to adjust some of the pins first. At the same time, you may want to clean off any accumulated grime from their years of use and storage. We suggest making sure each tube fits into its socket and works before cleaning it, in case you need to return any to a seller in as close to "as-sold" condition as possible.

First, carefully unwrap a single tube and examine the pins on the underside. If any are bent substantially out of line, **carefully** bend them back toward the proper position. You may use needle nose pliers or your fingers for this process. Do **NOT** grasp the pins too closely to the glass when straightening them - this can apply stress to the glass and possibly ruin the tube. Also, the tubes do not seat all the way into the sockets, so any slight curves in the half of the pins closest to the glass don't really matter.

**Note: The pins are made of a rather soft metal. Take care when adjusting them to avoid bending them further than necessary.**


Once you have all of the pins close to the correct positions, place the tube over one of the sockets on the clock. You should be able to position the tube with pins 1 and 17 (the ones separated by the gap) directly over the corresponding positions of the tube socket. Don't try to press the tube down yet - just hold it with those pins sitting on the socket. While continuing to hold the tube with one hand (you don't want to let go and have it fall off), examine each of the other pins in relation to their corresponding socket positions. This will give you an idea which pins need to be moved and in which directions in order for the tube to fully seat in the socket. Remove the tube and perform the necessary pin adjustments. Repeat this procedure until all pins are aligned.

**Note: In some cases, the correct adjustment will be to move a previously-adjusted pin slightly - if you discover a series of pins all out of line by the same amount, the problem may be with a prior pin instead.**

Once all adjustments are complete, grasp the tube and hold it on top of the socket. Double-check your alignment and gently insert the tube into the socket. If the tube will not seat into the socket, check for a misaligned pin hanging up on the inner lip of a socket position.

Figure 2–2 Tube socket showing keyed pin

---

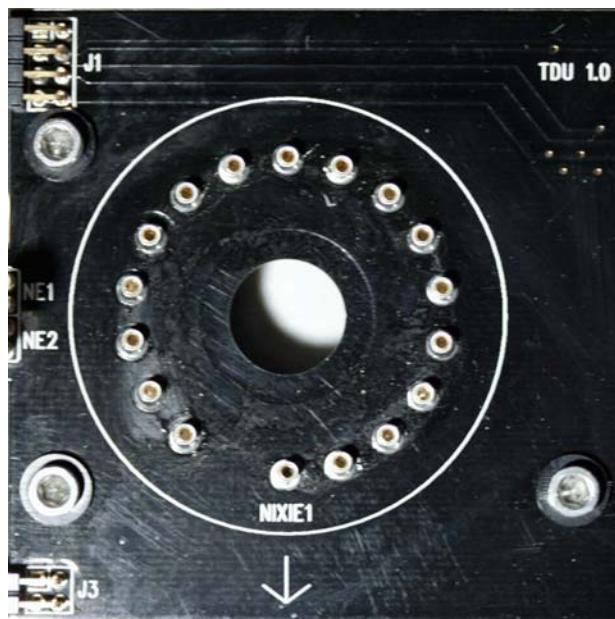

---

**Note:** The hole in the circuit board is to accommodate the glass protrusion left over from when the tube was manufactured. That protrusion is one of the most fragile components of the tube, so be careful not to bump it on anything and never stand the tube on a completely flat surface.


After making sure each pin is seated in the socket, gently push the tube down to fully seat it in the socket. You can wiggle the tube from side to side or front to back **slightly** (less than 1/8" away from straight at the top) if necessary. Do not move move the tube further than this - that can damage it. The tube should move approximately 1/8" down into the socket. The pins do not go all the way into the socket - as shown in the following figure, a portion of the pins remains exposed. The tubes are interchangeable - there's no specific order, but it is most convenient to install them from left to right (or right to left, if you're left-handed).

Once installed, you can tilt the tubes slightly (as described above) if any appear tilted compared with each other and the copper rods.

## Unpacking and installing the clock

Figure 2–3 Tubes installed in sockets

---

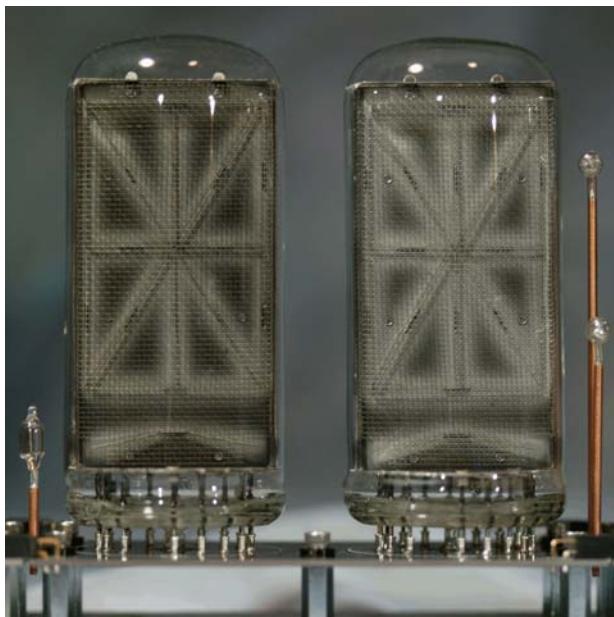

---

Once you have inserted all six tubes, we recommend you perform a segment test as shown in Section 8.3 to verify that all of your tubes are working properly with all segments lighting as expected, no tubes substantially brighter or dimmer than the others, and so on. If you discover any problems, try exchanging tubes between sockets. If the problem stays with the tube, you have a bad tube and should contact the seller. If the problem stays with the socket, there may be a problem with the clock and you should refer to Section 8.4 for assistance.

At this point you may want to clean the tubes. We have found that removing the tube and carefully blotting it with a damp paper towel will remove most accumulated grime. Be careful when cleaning the back of the tube, as it is easy to wipe off the factory print with the brand, date code, etc. Some tubes sold as surplus in the 1970's may have price stickers on the top which are somewhat harder to remove. Patience is key here.

There is normally no need to attempt to clean the underside of the tubes where the pins are located.

Once each tube is cleaned and dry, re-install it in the clock. You may want to use cotton gloves to avoid getting fingerprints all over your newly cleaned tubes.

### 2.3

#### Installing the cover

Examine the bottom edge of the acrylic cover to make sure the small clear plastic bumpers are in position in each corner. If any have been dislodged, stick them back on in the appropriate location(s).

Position the clock in the location you selected for it. Be sure to leave enough clearance for the power cord to enter on the back left as well as space on the right side to access the control knob.


Place the acrylic cover on top of the clock. You may want to use cotton gloves to avoid getting fingerprints on the cover.

### 2.4

#### Connecting power and starting the clock

Unpack the clock AC adapter (the one with the round connector on the end of the cable). Plug the round connector into the back left opening on the clock and plug the adapter into a wall outlet.

**Figure 2–4 Power connector location**

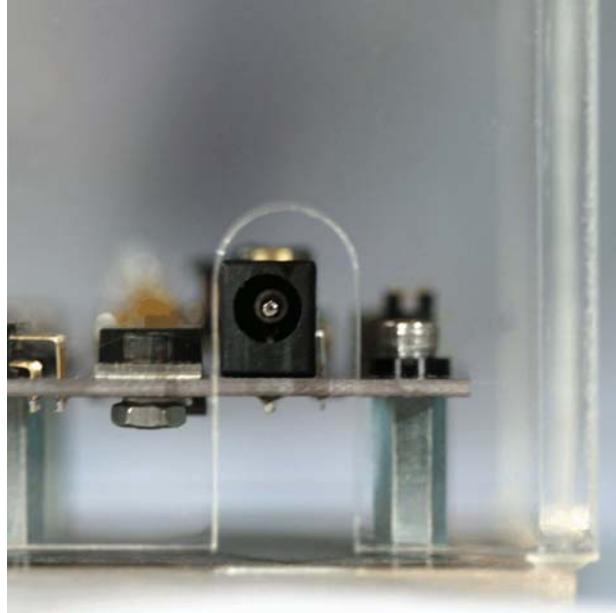

The clock should light up and display the following (in order):

MODSIX  
V08-08 (these numbers may vary)  
RF-LNK  
HH:MM:SS (time) with underlines  
Day of week  
Month / day  
Year

## Unpacking and installing the clock

At this point, the clock should be cycling between displaying the time and (once a minute) the other information.

If any tubes are not lit or the colons in HH:MM:SS are not lit, unplug the clock, remove the cover, and check your installation of the tubes. **DO NOT** operate the clock without the cover in place - hazardous voltages are present at some locations on the circuit boards when the clock is operating.

**Note:** You may find the power-on segment test (Section 8.3) useful for troubleshooting.

### 2.5

## The GPS repeater (Optional)

If this option was ordered, unpack the GPS repeater and its two antennas and determine where you want to locate the GPS repeater. The GPS repeater contains the environmental sensors for the clock, so you will want to locate it away from any sources of temperature changes such as windows, heaters, and so forth. The repeater will operate over distances up to 100 feet, depending on the levels of radio interference in your area. The clock and GPS repeater are normally already paired to each other. If you change the radio channel or baud rate (see menu options LNKNU / RFCHAN and LNKNU / RFBAUD, respectively) you will need to re-pair the clock and repeater. Refer to Section 4.1 for additional information on the pairing process.

**Note:** Use of the GPS repeater is optional. A GPS receiver can also be directly connected to the clock. See Section 2.6 and Section 8.1 for additional information. Only one of the two GPS options (repeater or receiver) should be used with the clock.

### 2.5.1

## Connecting power and starting the GPS repeater

Unpack the radio antenna (approximately 6" long) and screw it onto the connector labeled LNK on the GPS repeater. It is not necessary to tighten it more than finger tight. Once the radio antenna is attached to the GPS receiver, use the swivel connector on the antenna to position the antenna pointing straight up. The antenna pivots up to 90 degrees, but normally the best results will be obtained when the antenna is pointing straight up.

Similarly, unpack the GPS antenna. The GPS antenna needs to be able to "see" the GPS satellites, so it should be located near a window. Since the satellites move around in the sky you don't need to point the GPS receiver in any particular direction. The GPS antenna should be positioned horizontally (flat) with the shiny metal side facing down. The base of the GPS antenna has a small magnet that will stick to any ferrous surface. The GPS antenna is not waterproof; do not put it outside. Screw the connector of the GPS antenna onto the connector labeled GPS on the GPS receiver. Again, this only needs to be finger tight.

**Note:** The two antenna connectors are not interchangeable. The radio antenna must be connected to the connector labeled LNK and the GPS antenna to the connector labeled GPS.

Unpack the AC adapter for the GPS repeater and plug the end of the cord into the matching connector on the side of the GPS repeater. Plug the other end into a wall socket.

When plugged in, the repeater will display its firmware version on the IND LED (closest to the power connector) via blink codes. For example, three red blinks followed by six green blinks would indicate firmware V36. The repeater will then send various pieces of information to the clock, which will display them. The following is a list of typical display items in order.

NEX 36  
CH 77  
BAR/RH  
LEXCON  
BASIC  
19846  
WORDS

This example shows GPS repeater firmware V36, radio channel 77, optional installed barometric pressure and relative humidity sensors, and a lexicon (random word dictionary) named BASIC which contains 19,846 factory-installed words.

**Note:** See the separate document titled "MOD-SIX Nixie Clock System Updating Instructions" for information on installing user-provided lexicons.

The LEDs on the GPS repeater may flash at intervals or be on steady. The operation of these LEDs as well as other GPS repeater functions are described in detail in Chapter 4.

Once the GPS repeater receives a good GPS signal, it will pass the time and environmental data to the clock. The clock will show this by displaying a "SYNCED" message (once). Note that if you were watching the GPS repeater you may have missed this. The underlines on the time will also turn off, indicating that the clock is locked to the satellite time. The environmental data will also be displayed as part of the minute cycle, after the year displays.

## 2.6

### The GPS receiver (Optional)

**Note:** This description of the GPS receiver covers the USGlobalSat BR-355 unit. You may be using a different brand of GPS receiver. If that is the case, consult the documentation that came with your GPS receiver for information about setup and its LED indicator(s).

**Note:** The GPS repeater includes an internal GPS receiver. This section is intended for users who did not purchase the optional GPS repeater and instead wish to connect a GPS receiver directly to the clock.

## Unpacking and installing the clock

Unpack the GPS receiver from its packaging. You may use a PS/2-style GPS extension cable to locate the GPS receiver further away from the clock if desired.


**Note:** Not all "PS/2" extension cables are compatible with GPS receivers - PC keyboards and mice use a different subset of pins than the GPS receiver does. If you do not see any power indication on the GPS receiver when using an extension cable, try without the extension cable to eliminate it as a possible problem.

The GPS receiver needs to be able to "see" the GPS satellites, so it should be located near a window. Since the satellites move around in the sky you don't need to point the GPS receiver in any particular direction. The GPS receiver should be positioned horizontally (flat) with the word "GPS" facing toward the sky. The base of the GPS receiver has a small magnet that will stick to any ferrous surface. You may also use the suction cup to stick the receiver cable onto a smooth surface. The GPS receiver is not waterproof; do not put it outside.

The plug on the end of the GPS receiver cable is keyed - it can only plug into the connector on the clock (or an extension cable) one way. Plug it into the matching connector on the back of the clock, using the extension cable if necessary. Do not plug / unplug the GPS receiver from the clock without first disconnecting the power cord.

**Note:** Only one of the two GPS options (repeater or receiver) should be used with the clock.

**Figure 2-5 GPS connector on clock**

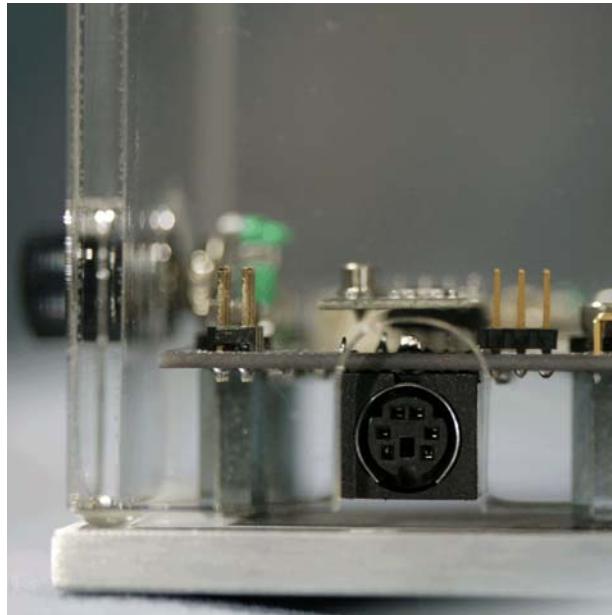

## 2.7

### A word about options

The clock comes preset with generic options. See the detailed information on setup options later in this document. There are many, many possible settings that may seem confusing at first. Feel free to read through the documentation and experiment.

## 2.8

### Important Notes

#### 2.8.1

#### High voltages and general safety

The clock is powered from two approved "wall wart" power supplies, one for the main clock and the other for the GPS repeater. These produce perfectly safe low voltages. Inside the clock, there are a number of places where high voltages are exposed. This clock is **NOT** a toy - please keep the provided clear acrylic cover in place at all times when the clock is operating. It also does a good job of keeping dust out and protecting the expensive tubes.

The GPS repeater runs on 5 volts and is electrically quite safe. Therefore, there is a clear acrylic top plate on it to keep the dust off, but if you have inquisitive children, pets, etc. it would be a good idea to put it somewhere out of reach, as it does not get along with (for example) silverware stuck into it, dog drool, and so forth.

The supplied AC adapters are universal and will work internationally as well as in the United States. If you are installing the clock outside the US, you will usually need adapters to convert the plugs to match your wall sockets.

Do not use AC adapters other than the ones provided with the clock.

Never plug the GPS receiver into anything other than the clock, and never plug anything other than the GPS receiver into the connector on the clock. Just because it looks like the same connector (for example, your PC's keyboard) doesn't mean it will do anything useful, and may damage the clock's components.

#### 2.8.2

#### Intermittent GPS reception

If you are in an area with poor GPS reception you may want to disable the "lost GPS signal" indication (normally underlines on all of the tubes) in the configuration options. The clock keeps excellent time even without the GPS receiver, and as long as the GPS receiver can get a signal once a day or so, the clock will be perfectly happy.

#### 2.8.3

#### Buzzing noises

In a very quiet room, you may notice a high-pitched buzzing coming from the clock. This is normal and is caused by the tubes vibrating as they are switched on and off thousands of times a second. Adjusting the display brightness (using the BRIGHT and DIM menu options) will normally clear this up - even a change of a single digit can make the noise disappear.

## Unpacking and installing the clock

or become much less obvious. For extreme cases, you can adjust the SYSMNU / PWMVAL setting, which changes the speed at which the clock updates the tubes. Changing the SYSMNU / PWMVAL setting may alter the apparent brightness of the display, and you may wish to adjust the BRIGHT and / or DIM settings accordingly.

### 2.8.4 "Cathode poisoning"

Don't worry, "cathode poisoning" isn't dangerous to you or any other form of life. It's a technical term referring to a particular type of damage inside the tubes. "Cathode poisoning" is when not all of each segment lights fully. The ends of the segment could light and not the middle, or vice versa. Or the segment could flicker. This can begin to damage the tubes (expensive!) if it persists for an extended period. Be sure to set the BRIGHT and DIM settings high enough that the segments light completely, or to 0 so that the display is completely off.

**Note:** The brief period where the display flickers on its way to fully off (when DIM 0 is selected) will not cause problems.

## 2.9 General care and maintenance

The acrylic covers on the clock and the GPS repeater may be cleaned if necessary. Normally all that will be needed is a light dusting with a dry Swiffer® cloth. Deeper cleaning can be done with a slightly damp soft cloth. Use water only, not any cleaning products. Never use an abrasive cleaner on the covers. To remove scratches or for extra-deep cleaning, NOVUS® brand plastic polish is recommended.

Never clean any components other than the acrylic covers and the GPS receiver.

Like all electronic devices, the clock can be damaged by static electricity. When installing the clock or changing settings, always touch the aluminum base plate first to discharge any static.

The clock uses a battery to keep the time going and remember the other settings in the event of a power failure. This battery should last longer than 4 years under normal operation, and is a common CR2032 type which your local drugstore, Radio Shack®, camera store, etc. will have in stock.

Replacement tubes are occasionally available on eBay® (currently around US \$100 each). The expense and rarity of these tubes adds to the uniqueness of the clock, but also means you should be extra careful to not damage them, either when installing them or during normal operation. A stray softball coming through the window and knocking the acrylic cover off the top of the clock will likely ruin your entire week.

# 3

## Configuration options

---

The clock contains a large number of settings which allow it to be configured for your particular tastes. The following sections describe the menus and how to change the options. There are many, many possible settings which may seem confusing at first. Feel free to read through the information and experiment - you can easily get back to the standard settings at any time.

### 3.1

#### The control knob

The clock's user interface is provided by an easy-to-use rotary encoder knob. The knob can be rotated clockwise (CW), or counterclockwise (CCW). It also has a pushbutton that can be pressed briefly and released (a "short press") or pressed and held for longer than 3 seconds (a "long press").

While in normal time display mode, if the knob is pressed for more than three seconds, the clock will enter configuration mode. Release the knob and rotate it to select the option to be modified. When the name of the option to be changed is displayed, a short press will then allow modification of the option by rotating the knob. Detailed explanations for each of the configuration options is provided later in this chapter.

If the clock is left in configuration mode displaying an option name, it will time out after 90 seconds of inactivity, save any changes, and exit configuration mode. This is to prevent accidental button presses from putting the clock into configuration mode unexpectedly. This timeout does not occur when displaying an option value (as opposed to the option name), as it is assumed that the multiple operations necessary to get that far into the menu were intentional.

**Note:** **Most options will not take effect until the configuration mode is exited.**

Options are grouped by related functions. Some options are organized within sub-menus. You may return to the main menu by selecting the RETURN option from within these sub-menus. Configuration mode can be exited by selecting EXIT from the main menu, or at any time by a long press from within most menus.

### 3.2

#### Quick-set mode

---

The clock has a "quick-set mode" to allow you to change a number of settings without needing to enter the full menus.

The first function allows you to override the day / night timer or force the display on or off. If the TMRMNU / QWKSET option is set to OFF, this function is disabled. If the option is set to TIMER, rotating the knob will alternately turn the TMRMNU / TMR MD option ON and OFF. If the option is set to DISP, rotating the knob will alternately turn the display off

## Configuration options

or on. This will override the day / night timer (if enabled) until the next time the timer would turn the display on or off.

**Note:** If the display is currently off, the first rotation of the knob will temporarily turn the display on (for the length of time set in the SYSMNU / UI TMR option, normally 30 seconds). After that time, the display will turn off again. If you want the display to remain on, rotate the knob one more time while the display is on, and it will remain on for the remainder of the current day / night timer cycle.

The second function allows you to adjust the time. This is only needed if the clock is not receiving a GPS time signal for some reason. A short press on the knob will produce an underline on the hours tubes. Rotate the knob to set the hours, then press the knob again to advance the underline to the minutes setting. Rotate the knob to set the minutes, then press again to advance to seconds. Rotate the knob to set the seconds and press again to exit.

**Note:** If the clock receives a GPS time signal, the clock will display the message "SYNCED" and change the time accordingly, overriding the manual time settings.

---

### 3.3 The main menu

The main menu is entered by a long press of the knob. The clock will adjust its display brightness to ensure that you can see the menus (it would be hard to adjust the brightness if you couldn't see the menu to set it!).

---

#### 3.3.1 TIME

This item sets the time when no GPS time signal is available. See the previous section for details.

---

#### 3.3.2 DAY

This item sets the day of the week. If the optional GPS receiver is used, this option is ignored and the information from the GPS signal is used instead.

---

#### 3.3.3 FONT

This item selects the font used when the time is displayed. Examples of all of the fonts are available in Chapter 6 as well as via the clock's FNTCAT option.

---

### 3.3.4 DATE

This item sets the day of the month (1-31) when no GPS time signal is available.

---

### 3.3.5 MONTH

This item sets the month (JAN-DEC) when no GPS time signal is available.

---

### 3.3.6 YEAR

This item sets the year when no GPS time signal is available. The allowable values are 2000 through 2099.

---

### 3.3.7 DIM

This item sets the brightness of the clock when operating in "dim" mode where ambient light is below the level set by the LVLSET item. Allowable values are 0 (completely off) and 1 (dimmest) to 100 (brightest). Please note the caution regarding tube damage in Section 2.8.4, and set the minimum brightness accordingly. If you want the clock display to turn off when the room is dark, simply set this item to 0.

**Note:** The "power on" neon lamp on the left side of the clock will always remain lit to show that power is still applied to the clock.

---

### 3.3.8 BRIGHT

This item sets the brightness of the clock when ambient lighting is above the level set by the LVLSET item. The allowable values are 0 to 100, as for the previous item.

---

### 3.3.9 LVLSET

This sets the ambient light level that switches between the DIM and BRIGHT display levels. You can use the LDRTST item to determine the best setting for your installation. Set the value to approximately the difference between the bright and dim readings from LDRTST. Adjust it if you notice the clock repeatedly switching between bright and dim due to minor changes in the ambient light level.

**Note:** The brightness changes slowly over a period of several seconds in order to reduce the distraction when the change happens.

## Configuration options

---

### 3.3.10 DOT MD

This item determines the behavior of the colon separator neon lamps. When ON, they are always on when the time is displayed. When set to BLINK they will cycle on and off in unison. When set to ALT they will cycle between the top and bottom lamps. When set to RAILRD they will cycle between top left / bottom right and bottom left / top right. When OFF, they will always be off. For the options with cycling, the interval is 2 seconds - 1 second in the 1st state, then 1 second in the 2nd state.

---

### 3.3.11 AM/PM

This setting determines the behavior of the AM/PM indicator neon lamp to the left of the hours. When OFF, it is always off. When ON, it will be dark for AM and lit for PM. If set to FLIP, it will be lit for AM and dark for PM.

---

### 3.3.12 XFADE

This item controls the speed at which numbers and letters fade from one to the next. Allowed values are 1 to 32, with larger numbers increasing the time the fade operation takes.

---

### 3.3.13 DATEMD

This setting determines if the date should be displayed and how often. It can be set to a variety of values. OFF disables the date display, 30 SEC displays the date twice per minute, 1 MIN through 15 MIN represent the number of minutes between date displays at the top of the minute, and 1↓MIN through 15↓MIN represent the number of minutes between date displays at the bottom of the minute.

---

### 3.3.14 DATDLY

This controls the amount of time each item of the date display is shown on the clock. The value ranges from 1-64 and represents the 16ths of a second for each item. For example, a value of 16 would show each item for exactly one second, a value of 40 would show each for 2.5 seconds, and so on.

---

### 3.3.15 DATSCR

There are three ways the date messages can appear. They can fade in and out as the time does, scroll on and off, or fade in and scroll off. If this option is set to FADE they will fade in and out, if set to SCROLL they will scroll in and out, and if set to FDSCRL they will fade in and scroll out.

---

### 3.3.16 YEAR D

This setting controls whether the year is displayed as part of the date messages. Valid settings are OFF and ON.

---

### 3.3.17 DAY D

This setting controls whether day name is displayed as part of the date messages. Valid settings are OFF and ON.

---

### 3.3.18 12/24

The clock is capable of displaying time in both 12-hour (normal) and 24-hour (military) time. In 12-hour mode the clock displays time from 12:00:00 through 11:59:59 and then repeats, while in 24-hour mode the clock displays time from 00:00:00 though 23:59:59. The allowed values are 12 HR and 24 HR.

---

### 3.3.19 LZ SUP

This setting controls whether the leading zero in the hours (for example, the "0" in 09:45:12) is displayed, or whether it should be suppressed (replaced with a blank). It can be set to OFF (show the zero) or ON (hide it).

---

### 3.3.20 LDRTST

This function displays the light sensor reading. It will report a reading between 0 and 100 depending on the level of ambient light in the room (0 is darkest, 100 is brightest). This is useful for selecting an optimal value for the LVLSET option.

**Note:** The light sensor is the clear component located to the right of the battery.

---

### 3.3.21 FNTCAT

This function will display the characters used in each of the clock's numeric fonts. Turn the knob to select a font name and then press to display it. Rotate the knob to cycle between displaying digits 1-6 and 5-0. Press briefly to return to the font catalog. A long press while a font name is being displayed will exit the menus completely. A long press while a font sample is being displayed will display SETFNT and then CONFIRM. A long press of the knob will display DONE and configure the clock to use the selected font. Rotating the knob in either direction will display ABORT, the font will remain unchanged, and the clock will return to the FNTCAT menu.

## **Configuration options**

**Note:** If the SYSMNU / DSPFNT option is not set to TIME F any change made here will only affect the font used to display the time, not the font used for other messages.

---

### **3.3.22 TUBETM**

With this item, you can see the number of hours the tubes have been lit. You can reset the timer by a long press of the knob and then updating each of the digits in turn by rotating the knob and then pressing it briefly. Exit with a long press of the knob. After saving the new timer value, the clock will report DONE.

**Note:** This item only displays the time the tubes are lit in this clock, not in their former lives as stock quotation tickers.

---

### **3.3.23 GPSMNU**

This setting enters the GPS configuration sub-menu.

---

### **3.3.24 SYSMNU**

This function enters the system sub-menu.

---

### **3.3.25 TMRMNU**

This setting enters the timer sub-menu.

---

### **3.3.26 DSTMNU**

This function enters the Daylight Saving Time sub-menu.

---

### **3.3.27 LNKMNU**

This function enters the RF Link (radio) sub-menu.

---

### **3.3.28 DIMMNU**

This function enters the dimmed display sub-menu.

---

### **3.3.29 METMNU**

This function enters the metrology (sensor) sub-menu.

---

**3.3.30 WRDMNU**

This function enters the random word generator sub-menu.

---

**3.3.31 PROFILE**

This function allows you to save, restore, or initialize the clock's configuration. The options are CANCEL (exit), BACKUP (save the settings), RESTOR (restore the settings), and FACTRY (use the settings the clock was built with). Refer to Section 3.12 for more information.

---

**3.3.32 EXIT**

Selecting this item stores any changes made to the configuration and returns the clock to its normal display mode. A long press will also save and exit.

---

**3.4 The GPS sub-menu**

This sub-menu controls various settings related to the GPS receiver and time synchronization.

---

**3.4.1 GPS MD**

This function tells the clock what type of GPS receiver is installed. OFF means that there is no GPS receiver connected, SERIAL indicates that a GPS receiver is plugged directly into the back of the clock, and RF-LNK configures the clock to work with the optional GPS repeater (see Chapter 4 for details on the GPS repeater).

**Note:** The SERIAL option only applies to GEN II CPUs.

---

**3.4.2 TMZONE**

This item configures your time zone (offset in minutes from UTC/GMT). For example, Eastern Standard Time (US) is GMT -5:00. Australian Central Western Time is GMT +8:45. Rotate the knob to select + or -, then press to select the offset hours. Rotate the knob to select values between 0 and 23, then press again to select the offset minutes. Rotate the knob to select values between 00 and 59. Press again to exit.

---

**3.4.3 TWEAK**

If you have some other clocks which are always off by a certain amount and you've become used to it, you can use this option to "tweak" the clock's displayed time between 2 minutes slow to 2 minutes fast. Allowable values are -120 (120 seconds slow) to 120 (120 seconds fast).

## Configuration options

---

### 3.4.4 ULCKI

As the GPS satellites are constantly moving overhead, there may be periods of time when the GPS receiver cannot lock onto the GPS signal. The clock can let you know this has happened by displaying the unlocked indicator. A variety of different indicator types can be shown on the underline segments of the tubes. Rotate the knob to select the style most appealing to you.

**Note:** If your GPS receiver is located in an area with poor reception, the cycling of the unlocked indicator may become annoying. You can set it to have all underlines off (no indicator) and optionally use the SYSMNU / LED MD option to display the unlocked indication.

---

### 3.4.5 ULCKTM

This setting controls how long the clock will wait after the loss of the GPS signal before activating the unlocked indicator. It can be set to values between 1 and 240 seconds.

---

### 3.4.6 TRKTOL

This option controls how tightly the clock will track GPS time. The GPS receiver only reports time to the nearest second, so multiple clocks might synchronize to the GPS signal, yet still differ from each other by fractions of a second. If you happen to have two (or more!) clocks within view, this out-of-step condition can be distracting. Setting this value to HIGH will cause the clock to take additional steps to synchronize at a specific period during each second. This may result in the display of additional SYNCED messages. Setting the value to LOW tells the clock that it isn't necessary to perform these additional steps, while MEDIUM configures the clock for a normal amount of synchronization tolerance.

**Note:** The clock will always adjust to GPS time if GPS reports a different time than the clock shows - this option only controls *when* within the 1-second interval the clock will perform this synchronization.

---

### 3.4.7 SNCMSG

This option controls whether the clock will display SYNCED messages when it updates its time from GPS. If you have TRKTOL set to HIGH, the clock will synchronize more frequently. If the SYNCED messages are distracting, you can disable them by setting this option to OFF.

**Note:** You may also disable all status messages by setting the SYSMNU / MSGS option to OFF.

---

### 3.4.8 INIT

The GPS receiver normally sends many other types of messages to the device it is connected to. For example, users of navigation systems need to know where they are as well as what time it is. In order to receive only the messages the clock is interested in, it normally sends a sequence of commands to the GPS receiver to configure it appropriately. These commands are listed in Appendix B.

If you are using something other than one of the supported GPS receivers, you may need to disable this option by setting it to OFF.

**Note:** Disabling sending the initialization strings by setting this option to OFF is a "last resort" option. The clock does not expect to receive any data from the GPS receiver except RMC sentences, and proper clock operation with INIT set to OFF cannot be assured.

**Note:** This option only affects the GPS receiver plugged directly into the clock.

---

### 3.4.9 RETURN

Return to the main menu.

---

## 3.5 The system sub-menu

The system sub-menu contains configurations options which are generally not changed after the clock has been set up. Most of the commonly-used items are located in the top-level menus.

---

### 3.5.1 QWKSEL

This item controls the response to a brief press on the control knob. TM SET allows quick setting of the time as shown in Section 3.2. WORDS will display one or more random words (GPS repeater required). METRPT displays the various sensors (temperature, humidity, etc.) DATE displays the date info, and NONE sets the knob to have no function.

**Note:** See TMRMNU / QWKSET for configuring the knob's response to rotation.

---

### 3.5.2 UI TMR

This setting controls the amount of time the display remains illuminated when the clock is awakened by rotation of the knob or a press of a button on the optional keyfob. It can be set to values between 1 and 240 seconds.

## Configuration options

---

### 3.5.3 DSPFNT

This item selects the numeric font used when non-time data (such as the date, temperature, etc.) is displayed. Examples of all of the fonts are available in Chapter 6 as well as via the clock's FNTCAT option. The default, TIME F, is to use whichever font is selected as the time font.

**Note:** Letters and punctuation are always displayed in the standard font - this option only controls numbers displayed during other (non-time) messages.

---

### 3.5.4 SEGTST

This function allows you to test all of the display elements for proper operation. Rotating the knob will cycle each individual tube element on and off in order, then will cycle through the neon AM/PM and colon lamps. Next, it will turn all elements and neon lamps on at once, then all off. Briefly press the knob to exit this function.

**Note:** The "power on" neon lamp on the left side of the clock will remain lit to show that power is still applied to the clock.

---

### 3.5.5 LED MD

This option controls the behavior of the green LED to the left of the battery. There are a wide variety of choices to suit individual tastes. In addition to basic OFF and ON functionality, 1PPS will cause the LED to pulse once per second, SYNC will cause it to pulse whenever the clock synchronizes time with GPS time. RF RCV causes it to pulse whenever a message is received via the GPS repeater and RMCRCV causes it to pulse whenever a valid time message is received via the GPS connector on the clock. LOCKED will light the LED when the clock is synchronized to GPS time, while NOLOCK will light it when the clock is **not** synchronized.

**Note:** The SYNC setting does not cause the clock to pulse the LED each time that a time message is received, but only when the clock updates its time because it disagrees with the time received via GPS. The SYNC setting may be desirable if you have MSGS turned off (see below) and you would still like an indication when the clock updates its time.

**Note:** The RMCRCV setting only applies to GEN II CPU boards.

---

### 3.5.6 SECNDS

This setting configures the seconds display in BRIGHT mode. It can be set to ON, SPIN\*\_-, SPIN\_\*, SPIN\*\*, or OFF. The SPIN modes generate a spinner on either the 10's of seconds, 1's of seconds, or both.

**Note:** Due to the number of display segments available in the tubes, the spinner is not an actual "sweep hand".

**Note:** For the corresponding function when the clock is dimmed, refer to DIMMNU.

---

**3.5.7 MSGS**

This setting controls whether or not status messages such as SYNCED, PING, etc. are displayed on the tubes. It can be set to OFF or ON.

---

**3.5.8 SCRLSP**

This option selects the speed at which text scrolls across the display. Valid settings are from 1 to 32. Higher values select slower scroll speeds. It interacts with SCRLXF.

---

**3.5.9 SCRLXF**

This option sets the length of time the clock crossfades between characters when scrolling text. Valid settings are from 1 to 32, with higher values lengthening the fading effect. It interacts with SCRLSP.

---

**3.5.10 PWMVAL**

This option sets the frequency which the clock uses to control the dimming of the tubes. The setting is the frequency used, which can be set to one of the following values: 57KHZ, 28KHZ, 14KHZ, 7200HZ, 3600HZ, or 1800HZ.

Lower frequencies will provide greater dimming range, but the frequency may interact with the power supply module or tubes and become audible, depending on the particular tubes in the clock and the range of your hearing. See Section 2.8.3 for more information.

---

**3.5.11 ENCDIR**

This setting can be used to reverse the function of the knob's rotation. Setting it to CW causes values to increase when the knob is rotated clockwise, while setting it to CCW causes the values to increase when rotated counterclockwise.

---

**3.5.12 RTCAGE**

This setting is used to make extremely fine adjustments to the clock's timekeeping when GPS time is not used. You should never have to change this from its default value of 0. The valid settings are -128 to +127.

## Configuration options

### 3.5.13 EXP MD

This option configures the operation of the expansion connector on the clock's CPU board. When set to ON, a 1Hz TTL square wave signal is output on J5 Pin 3. You will not normally use this option. Please see the CPU schematic for details.

**Note:** This option only applies to GEN II CPU boards and should not be enabled on GEN I boards.

### 3.5.14 RETURN

Return to the main menu.

## 3.6 The timer sub-menu

The timer function allows you to program in times when the tubes are turned off. This can reduce the number of hours the tubes are illuminated to extend their projected lifespan, or simply blank the display when no-one is around to watch it.

**Note:** This section just describes the possible settings for each option. For a detailed explanation of their usage, refer to Appendix D.

**Note:** Brightness levels slowly ramp up and down to target levels, allowing time for the final brightness level to be reached.

**Note:** If you prefer, you can set DIM to 0, which will cause the tubes to turn off when the room is dark.

### 3.6.1 TMR MD

This setting enables or disables the timer function.

### 3.6.2 TM1OFF

This option configures the Timer 1 OFF start time. A short press on the knob will produce an underline on the hours tubes. Rotate the knob to set the hours, then press the knob again to advance the underline to the minutes setting. Rotate the knob to set the minutes, then press again to advance to seconds. Rotate the knob to set the seconds and press again to exit.

**Note:** If you have configured the clock for 12-hour display mode, make sure that you have selected the correct time by checking the AM/PM indicator light when setting the hours.

**Note:** The "power on" neon lamp on the left side of the clock will remain lit to show that power is still applied to the clock.

---

**3.6.3 TM1 ON**

This sets the Timer 1 ON start time. Refer to the previous item for details.

---

**3.6.4 TM2OFF**

This sets the Timer 2 OFF start time. Refer TM1OFF for details.

---

**3.6.5 TM2 ON**

This sets the Timer 2 ON start time. Refer to TM1OFF for details.

---

**3.6.6 MON - SUN**

These options select which timer(s), if any, will be used for each day of the week. They can be set to TMR1 which will use the times set in TM1OFF / TM1 ON, TMR 2 which will use TM2OFF / TM2 ON, TMR1 2 which will use both, NX OFF which will turn the tubes off on that day, NX ON which will turn the tubes on, or TMROFF which performs no special action on that day.

---

**3.6.7 QWKSET**

This option sets the behavior when the knob is turned during normal operation. If it is set to OFF, this function is disabled. If the option is set to TIMER, rotating the knob will alternately turn the TMR MD option ON and OFF. If the option is set to DISP, rotating the knob will alternately turn the display off or on.

**Note:** See **SYSMNU / QWKSEL** for configuring the knob's response to brief presses.

---

**3.6.8 RETURN**

Return to the main menu.

---

**3.7 The DST sub-menu**

This would be so much simpler if governments would stop changing the Daylight Saving Time rules... However, since that is unlikely to happen, the clock allows for every possible rule that might exist, even if you need to set your clock back 37 minutes and 18 seconds in the spring, and ahead in the fall!

## Configuration options

---

### 3.7.1 DST MD

This setting enables (ON) or disables (OFF) the Daylight Saving Time auto-adjust.

**Note:** This does not indicate whether DST is currently in effect, but rather if the clock will change time when DST begins or ends.

---

### 3.7.2 B TIME

This value sets the time of day when DST begins.

---

### 3.7.3 B MNTH

This value sets the month when DST begins.

---

### 3.7.4 B NTH

This value sets which week (FIRST, SECOND, etc.) of the month DST begins.

---

### 3.7.5 B DAY

This value sets the day of the week when DST begins.

---

### 3.7.6 E TIME

This value sets the time of day when DST ends.

---

### 3.7.7 E MNTH

This value sets the month when DST ends.

---

### 3.7.8 E NTH

This value sets which week (FIRST, SECOND, etc.) of the month DST ends.

---

### 3.7.9 E DAY

This value sets the day of the week when DST ends.

---

**3.7.10 OFFSET**

This value controls the size of the adjustment when DST is in effect. While normally 1 hour, it can be set to any offset if necessary. Rotate the knob to select + or -, then press to select the offset hours. Rotate the knob to select values between 0 and 23, then press again to select the offset minutes. Rotate the knob to select values between 00 and 59. Press again to exit.

---

**3.7.11 RETURN**

Return to the main menu.

---

**3.8 The RF Link (radio) sub-menu**

This menu contains options for configuring the radio settings used by the clock.

---

**3.8.1 RFCHAN**

This item selects the radio channel used for communication with the GPS repeater. For more details, refer to Section 4.1.

---

**3.8.2 RFBAUD**

This item selects the speed of radio transmissions when communicating with the GPS repeater. For more details, refer to Section 4.1.

---

**3.8.3 FOB MD**

This option controls the clock's response to the optional keyfob. Setting it to ON allows full control of the clock by the keyfob, while setting it to VALET prevents the keyfob from changing the clock's configuration settings. A value of OFF causes the clock to ignore the keyfob totally. A example use of the VALET option is when the clock is locked inside a display cabinet and you want to allow someone to turn the clock display off and on with the keyfob, but not let them change any of the clock's menu settings.

---

**3.8.4 ADDR**

The ADDR option allows you to assign a unique address to the clock when a number of clocks are operating on the same RF channel. Allowable values are 0 through 7, with a default of 0. This is useful when you are using multiple clocks with a single GPS repeater (see Section C.2) but would like to control each clock with a different keyfob. The clock will only respond to a keyfob set to the same address as the clock.

## **Configuration options**

---

### **3.8.5 RETURN**

Return to the main menu.

---

## **3.9 The dimmed display sub-menu**

This menu sets display options when the clock is operating in DIM mode. For user convenience, distracting display operations can be suppressed when the clock is in DIM mode (for example, in a bedroom).

---

### **3.9.1 DATE**

This option controls whether or not the date information will be displayed when the clock is in DIM mode. If ON, the date will display as configured in the main menu. If OFF, the date will not be displayed.

---

### **3.9.2 SECNDS**

This setting adjusts the behavior of the seconds digits in DIM mode. It can be configured to behave the SAME as the SYSMNU / SECNDS setting, or set to any of the other possible values for the SYSMNU / SECNDS setting.

---

### **3.9.3 DOT MD**

Similar to SECNDS above, it can be set to behaving the SAME as SYSMNU / DOT MD or to any of the other choices for SYSMNU / DOT MD.

---

### **3.9.4 LED MD**

As for DOT MD above, you may set this option the SAME as SYSMNU / LED MD or to any of possible settings for SYSMNU / LED MD.

---

### **3.9.5 MET**

This setting controls whether or not the metrology sensor data (temperature, etc.) is displayed when the clock is in DIM mode. It can be set to ON or OFF.

---

### **3.9.6 WORDS**

This setting controls whether or not random words are displayed when the clock is in DIM mode. It can be set to ON or OFF.

---

### 3.9.7 RETURN

Return to the main menu.

---

## 3.10 The metrology (sensor) sub-menu

**Note:** If a clock is not equipped with a sensor (for example, clocks without GPS repeaters do not have an external temperature sensor), the sensor(s) will be treated as if the corresponding LBL option was set of OFF - in other words, it will never display regardless of the LBL setting for that sensor.

**Note:** Not all of the optional sensors provide readings for all 3 items (temperature, humidity, and barometric pressure). If a sensor does not provide a reading for an item, display of that item will be skipped.

**Note:** Some of these options are for potential future add-ons. The presence of options in this menu does not indicate that the add-ons are available, nor imply any promise that they will be offered at any point in the future. Such options will be noted as "for future use".

---

### 3.10.1 MET MD

This setting determines if the temperature and other sensors should be displayed and how often. It can be set to a variety of values. OFF disables the sensor display, 30 SEC displays the date twice per minute, 1 MIN through 15 MIN represent the number of minutes between sensor displays at the top of the minute, and 1↓MIN through 15↓MIN represent the number of minutes between sensor displays at the bottom of the minute.

**Note:** The SYSMNU / DSPFNT and DATDLY menu items also control the font and delay when displaying the temperature.

---

### 3.10.2 F/C

This option selects the scale used when displaying temperature. FAHR selects Fahrenheit, while CELS selects Celsius.

---

### 3.10.3 HG/MB

This option selects the scale used when displaying humidity. IN HG selects inches of mercury, while MILBAR selects millibars.

---

### 3.10.4 BTREND

This option controls the display of barometric trends. OFF disables trend display, TEXT displays the trend as a word (like "RISING") on a separate display line, while COMPCT displays a single concise symbol at the right of the barometric pressure display line.

## Configuration options

---

### 3.10.5 S1 LBL

The clock can display data from up to four remote sensors. Sensor 1 is normally the sensor on the GPS repeater while sensors 2 through 4 are for additional sensor units (**for future use**).

This option controls whether the data from sensor 1 is displayed and how it is labeled. OFF disables the display, while the other settings (BLANK, A, B, C, D, R, I, O and \*) will enable the display using the indicated label.

---

### 3.10.6 T1 CAL

This option allows adjustment of the temperature reported by the temperature sensor. It can be adjusted from -20 degrees to 20 degrees. The calibration is expressed in display units, so a value of 1 will increase the display by one degree Fahrenheit if METMNU / F/C is set to FAHR or by one degree Celsius if set to CELS.

---

### 3.10.7 H1 CAL

With this option calibrates the humidity sensor on remote sensor A. The adjustment range is -20 to +20 percent. Note that humidity can vary greatly over short distances, even outside in open spaces. Also, the response time differs on various types of humidity sensors. Thus, attempting to fine-tune the calibration of the humidity sensor is likely to be non-productive.

---

### 3.10.8 B1 CAL

This option fine-tunes the reported barometric pressure. The adjustment range is -125 to +125. This value is always in millibars regardless of the setting of METMNU / HG/MB.

**Note:** One millibar is approximately equivalent to 0.03 inches of mercury.

---

### 3.10.9 S2 LBL

This option (and the corresponding T2 CAL, H2 CAL and B2 CAL) operates as described above for sensor 1.

---

### 3.10.10 S3 LBL

This option (and the corresponding T3 CAL, H3 CAL and T3 CAL) operates as described above for sensor 1.

---

### 3.10.11 S4 LBL

This option (and the corresponding T4 CAL, H4 CAL and B4 CAL) operates as described above for sensor 1.

---

### 3.10.12 CLKSTA

This option controls the sensor number used to display the clock's internal temperature sensor.

**Note:** This sensor is located inside one of the clock's integrated circuits. Due to normal heating of the electronics as well as operating inside the acrylic case, the temperature reported by this sensor will be higher than the room temperature. Thus, it is probably of interest to only a small subset of users and is set to OFF by default.

**Note:** Users should avoid conflicting numbering between the internal temperature sensor and any installed remote sensors in order to avoid inconsistent displays. For example, if the optional GPS repeater is installed, it will usually appear as sensor 1 and the internal sensor should be assigned to sensor 2, 3, or 4 in this case.

---

### 3.10.13 H SUFF

With this option you can control the suffix used for display of humidity. You can choose from RH, H, % or %H.

**Note:** The percent symbol is somewhat unusual looking due to limitations imposed by the number of segments in the tube. There are two different styles to accommodate user preferences.

---

### 3.10.14 HEAR D

Normally the GPS repeater will handle receiving data from additional sensors and relaying it to the clock. The HEAR D (hear directly) option, when set to ON, configures the clock to receive data directly from the remote sensors. Depending on the locations of the clock, GPS repeater, and any remote sensors ON or OFF may produce different results. Experiment to determine which setting is best in your particular installation. **For future use.**

---

### 3.10.15 DSPDLY

This setting controls the amount of time each item of sensor data is shown on the clock. The value ranges from 1-64 and represents the 16ths of a second each item will be shown. For example, a value of 16 would show each item for exactly one second, a value of 40 would show each for 2.5 seconds, and so on.

## Configuration options

---

### 3.10.16 RETURN

Return to the main menu.

---

### 3.11 The random word sub-menu

**Note:** The dictionaries of random words are stored in the optional GPS repeater. If you do not have a GPS repeater as part of your clock system, the clock will display NOWRDS instead of a random word if the random word feature is enabled. Similarly, NOWRDS will be displayed if the GPS repeater is present but not communicating with the clock for some reason. The clock buffers a small set of words to handle temporary loss of communication with the GPS repeater.

---

#### 3.11.1 WRD MD

This setting determines if words should be displayed and how often. It can be set to a variety of values. OFF disables word display, 30 SEC displays a word twice per minute, 1 MIN through 15 MIN represent the number of minutes between word displays at the top of the minute, and 1↓MIN through 15↓MIN represent the number of minutes between word displays at the bottom of the minute.

---

#### 3.11.2 NWORDES

This option selects how many words will be displayed at a time. It can be set to a value between 1 and 5.

---

#### 3.11.3 LEXICN

This option controls whether words are selected from both the 6-letter and 4-letter dictionaries (ALL), 6-letter only (6 LTRS), or 4-letter only (4 LTRS).

---

#### 3.11.4 DIRTY

This option controls the display of "dirty words". It can be set to OFF, ON, or CENSOR. CENSOR will replace one or more letters with the \* character.

---

#### 3.11.5 EFFECT

This setting selects how words appear on the clock. It can be set to NONE (no special effect), L-FILL (words appear from left to right), R-FILL (right to left), RNDLET (letters appear in random order), RNDSEG (segments appear in random order), RANDOM (one of the above methods is chosen at random, or RNDRND. RNDRND only has effect when NWORDES is set to a value greater than 1. In that case, if RANDOM is chosen, the same

method will be used for all words in the sequence. RNDRND will use a different random method for each word.

---

**3.11.6 LETDLY**

This option determines the delay between letters in 16ths of a second per letter. For example, a value of 16 would pause for exactly one second between letters, a value of 40 would pause for 2.5 seconds, and so on. It can be set to a number between 1 and 128.

---

**3.11.7 SEGDLY**

This option behaves similarly to LETDLY, but controls the delay between segments appearing when EFFECT is set to RNDSEG.

---

**3.11.8 WRDDLY**

This setting operates similarly to LETDLY, but controls the delay between words when NWORDS is set to a value greater than 1.

---

**3.11.9 BKENDS**

The bookends setting controls what is displayed in the 1st and 6th characters of the display when a 4-letter word is displayed. OFF will leave those positions blank, - - displays dashes and \* \* displays asterisks.

---

**3.11.10 RETURN**

Return to the main menu.

---

**3.12 Restoring default settings**

While you are becoming familiar with the clock's operation and features, we suggest not using the BACKUP option (your settings are still remembered by the clock). If you get stuck with some odd options, you can use the RESTOR or FACTRY options to get things back to the way the clock was shipped. Once you're happy with your customizations, you can use the BACKUP option to save them so that you can restore them at any future time. That's handy if, for example, you want to show off the various features to someone but then want to get everything back to the way you like it.

**Note:** The default settings are listed in Appendix A.

---

# 4

## The GPS repeater (Optional)


---

The optional GPS repeater operates as a wireless repeater of GPS time information, transmitting the time from the GPS receiver to the clock once per second. Additionally, the GPS repeater measures the ambient environment (temperature and optionally humidity and / or barometric pressure) and transmits this information to the clock every 15 seconds. The ability to separate the GPS antenna and GPS repeater from the clock allows more flexibility when locating the clock in your home or office. You don't need to be concerned that a GPS receiver physically attached to the clock will be able to receive an acceptable satellite signal.

The clock and GPS repeater are normally already paired to each other. If you change the radio channel or baud rate (see menu options LNKMNNU / RFCHAN and LNKMNNU / RFBAUD, respectively) you will need to re-pair the clock and GPS repeater.

**Figure 4–1 GPS repeater top view**

---

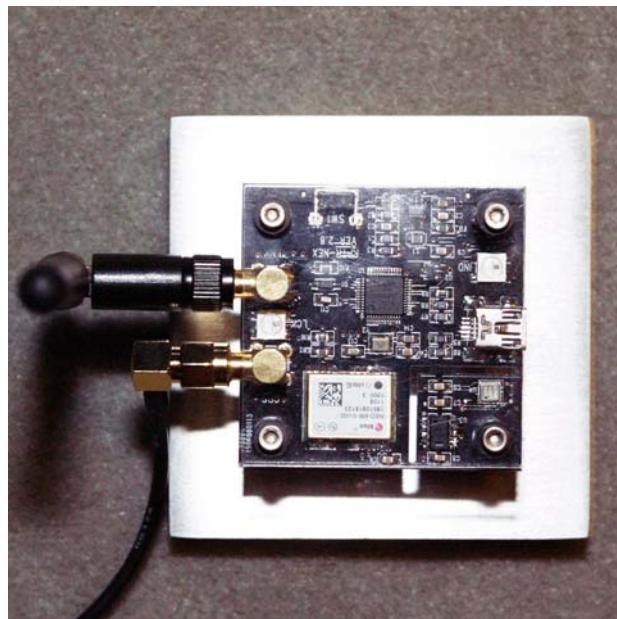

---

During normal operation, the two LEDs on the GPS repeater will display various status indications per the tables below. If the LEDs are distracting, you can disable the blinking IND LED with a single brief press of the button on the GPS repeater. A second brief press of the button will also disable the LCK LED, and a third brief press completes the cycle and re-enables both LEDs.

## The GPS repeater (Optional)

IND LED	Description
Blink Green	Normal time packet sent
Blink Yellow	Slot zero time packet sent
Blink Blue	Special packet (words, sensor, etc.) sent
Blink Red	Packet from remote sensor received ( <b>for future use</b> )
Solid Blue	Pairing in progress
Solid Green	Pairing successful
Solid Red	Pairing unsuccessful

LCK LED	Description
Solid Red	GPS cold start
Solid Yellow	Some GPS satellite data received, but not enough for full GPS lock
Solid Green	GPS satellite data received, full GPS lock established
Solid Cyan	Loss of full GPS lock (satellite view obstructed, etc.)

**Note:** It may take up to several minutes to achieve a solid GPS lock after the GPS repeater is powered on. If the LCK LED does not turn blue after 10 minutes, try relocating the GPS antenna to a different location.

---

## 4.1 GPS repeater pairing

### 4.1.1 Pairing overview

A long press on the GPS repeater pushbutton will cause the repeater to try to "pair" with the clock. Pairing is necessary if you change the radio channel or baud rate on the clock, as the GPS repeater needs to know these settings to be able to properly communicate data to the clock. The channel and baud rate are set via the clock's configuration menu. The GPS repeater will then scan the radio channel range, transmitting "ping" packets and looking for the correct response from the clock. This procedure allows the GPS repeater to determine and then match its radio channel and baud rate to that of the clock. The information is then saved in non-volatile memory in the GPS repeater so that the procedure does not have to be performed again unless the radio channel or baud rate has been changed on the clock.

---

### 4.1.2 Pairing procedure

The clock should be powered on and operating normally. The GPS repeater must have both antennas connected and also be powered on.

**Note:** The pairing procedure is somewhat more complicated when there is more than one clock within radio range. In the unlikely event that this situation applies to you, please refer to Appendix C for additional information.

Press and hold the pushbutton on the GPS repeater for approximately 5 seconds until all LEDs on the GPS repeater turn off, then release. The IND LED will illuminate solid blue while searching for the clock, then will turn solid green to indicate successful pairing. The IND LED will then turn off and start blinking. If the MSGS option is enabled on the clock, a number of messages similar to the following will appear on the clock.

\*PING\*  
NEX 36  
CH 77

If the IND LED lights red briefly instead, the GPS repeater did not find the clock. Repeat the process after adjusting the orientation of the GPS repeater or physically moving it closer to the clock. You may also try changing the channel and baud rate on the clock before re-pairing.

---

### 4.1.3 Notes on pairing

The pairing process requires that the clock and GPS repeater be able to hear each other. Under normal operations, only the clock has to hear the GPS repeater's broadcasts. You may need to move the GPS repeater closer to the clock to successfully pair the two devices and then relocate the GPS repeater to its desired location.

---

### 4.1.4 Hints to improve range

The GPS repeater operates at very low power levels within the crowded 2.4GHz ISM band. It shares these frequencies with Wi-Fi™ access points, Bluetooth®, wireless cameras, baby monitors, cordless telephones, and even microwave ovens.

The GPS repeater is not designed for long-range transmissions, just to allow you to locate the GPS receiver in a more convenient location without the need to run a long extension cord. The maximum range (which will be difficult to achieve in most environments) is approximately 100 feet. The wireless range you actually achieve will depend greatly on environmental conditions. If you are trying for extended distances, you may have to experiment with location, orientation of the GPS repeater's antenna, radio channel, and baud rate. Walls and other obstacles also degrade the signal.

Lower baud rates will typically have longer ranges, but higher baud rates will be more immune to certain types of sporadic interference. You can try setting a radio channel outside the Wi-Fi band, or between Wi-Fi channels, but be sure to stay within the legal operating frequencies for your country.

**Note:** In the United States, the allowed ISM band is 2.4GHz to 2.4835GHz, represented by channels 1-79 in the clock.

You can configure the clock's green LED using the SYSMNU / LED MD option to blink whenever a valid data packet is received from the repeater. It should blink in sync with the IND LED on the GPS repeater. You can use this for confirmation of successful data transmission.

---

# 5

## The keyfob (Optional)

---

The keyfob is an optional remote control which can be used to configure and operate the clock via a convenient hand-held device. Depending on your preference the keyfob can be configured to allow full control of the clock via the setup menus or be restricted to a subset of functions which don't change the clock's setup options. The keyfob can also be completely ignored by the clock if so desired.

The clock and keyfob are normally already paired to each other. If you change the radio channel, baud rate, or clock address (see menu options LNKMNNU / RFCHAN, LNKMNNU / RFBAUD and LNKMNNU / ADDR, respectively) you will need to re-pair the clock and keyfob.

**Figure 5–1 Keyfob**

---



---

Each button on the keyfob performs a specific function. Additionally, certain combinations of buttons have additional functions. These are described briefly in the following table.

**Note:** Up is defined as the button closest to the keyring loop.

**Note:** When multiple buttons are shown in the table, they should both be pressed simultaneously and held until the keyfob LED flashes (approximately 5 seconds).

## The keyfob (Optional)

Button(s)	Function
Up	Equivalent to rotating the control knob clockwise (normally TMR ON - see TMRMNU)
Down	Equivalent to rotating the control knob counterclockwise (normally TMROFF)
Left	NX OFF - turn clock display off
Right	NX ON - turn clock display on
Center	Equivalent to pressing the control knob for a brief or long press
Left + Right	Pair keyfob with clock
Center + Up	Increment keyfob address (see LNKMNNU / ADDR)
Center + Down	Decrement keyfob address (see LNKMNNU / ADDR)
Up + Down	Display keyfob address and firmware version on clock
Center + Right	Factory test mode (see below)

---

## 5.1 Keyfob pairing

### 5.1.1 Pairing overview

A long press on the left and right keyfob buttons will cause the keyfob to try to "pair" with the clock. Pairing is necessary if you change the radio channel or baud rate on the clock, as the keyfob needs to know these settings in order to be able to properly communicate with the clock. The radio channel and baud rate are set in the clock's configuration options. The keyfob will then scan the radio channel range, transmitting "ping" packets and looking for the correct response from the clock. This procedure allows the keyfob to determine and then match its radio channel and baud rate to that of the clock. The information is then saved in non-volatile memory so that the procedure does not have to be performed again unless the radio channel or baud rate has been changed on the clock.

---

### 5.1.2 Pairing procedure

The clock should be powered on and operating normally. The keyfob should have a fresh battery in it (one is pre-installed in the keyfob). You must be able to read messages displayed on the clock from where you are using the keyfob.

Press and hold the left and right buttons on the keyfob simultaneously until the clock displays a message like "FOB-0", then release. This will normally happen within 10 seconds of pressing the buttons. The "0" in the message indicates that the keyfob is configured to address 0. If your clock's configuration also has its LNKMNNU / ADDR option set to address 0, you're all set. While the keyfob is searching for the clock, the red LED on the keyfob will flash rapidly. Once the clock is found, the green LED on the keyfob will blink once.

---

5.2

## Keyfob address

If you have multiple clocks on the same radio channel, but want to control them independently with a separate keyfob for each, you will need to change the keyfob's address. To increment the keyfob address press the center and up buttons on the keyfob simultaneously for 5 seconds. The clock should display a message such as "F1 1-4" indicating that the keyfob is now at address 1 and the keyfob firmware version is 1.4. Similarly, you can decrement the keyfob address by pressing the center and down buttons on the keyfob simultaneously for 5 seconds. The keyfob will also display the address on its LED per the following table. Continue as needed to set the desired keyfob address.

Address	LED Display
0	red flash / red flash
1	red flash / 1 green flash / red flash
2	red flash / 2 green flashes / red flash
3	red flash / 3 green flashes / red flash
...	...
7	red flash / 7 green flashes / red flash

If necessary, change the LNKMNNU / ADDR setting on the clock to match the address set on the keyfob.

You can quickly determine the configuration of a paired keyfob by pressing and holding the up and down buttons simultaneously until the clock displays a message of the form "F# Vxx" where # indicates the keyfob's current address (0-7) and xx indicates the keyfob's firmware version.

**Note:** Internal clock and repeater messages have priority over informational messages from the keyfob. It is best to pair and / or change the address of the keyfob when the clock is expected to continue its normal time display. Otherwise, the informational display message from the keyfob may not appear on the clock, even if the function requested has been performed. You may press the center button on the keyfob briefly to "get the clock's attention" and revert to time display in order to ensure messages from the keyfob are displayed.

---

5.3

## Keyfob test mode

The keyfob includes a factory test mode which is included here for completeness. Press and hold the center and right buttons until the red LED on the keyfob illuminates. Press and hold any button any button until the red LED turns off. This tests the basic processing functions of the keyfob, the LED, and the buttons.

### 5.4

### Keyfob uses

There are many possible uses for the keyfob. In this section we will cover some of them. We're sure you can come up with some more good ideas. All of the clock's functions can be controlled by the keyfob, so you never need to use the control knob on the clock. This can be quite useful if the clock is out of convenient reach.

**Note:** It is possible to "paint yourself into a corner" by using the keyfob to change the clock's radio channel, baud rate, or address. If you change any of those settings, once you exit the menu (applying your changes), the clock will no longer respond to the keyfob. In this case, you will need to re-pair the keyfob with the clock and / or change the keyfob's address to match the clock.

#### 5.4.1

#### Bedside remote control

The clock can be configured to turn the tubes off and back on at specific times (see the TMRMNU settings). It can also be set to turn the tubes off when the room is dark (the DIM and LVLSET menu settings). The keyfob provides another way to control the clock display remotely. The tubes can be immediately turned off and back on with the left and right keyfob buttons, respectively. You can also enable and disable turning off the tubes at the scheduled times using the up and down buttons on the keyfob.

#### 5.4.2

#### "Valet Mode" in a display case

You may wish to install the clock inside a display case. Perhaps you'd like to exhibit it in a museum. In this situation you might want to allow staff to turn the tubes on and off with the keyfob, but prevent them from making any changes to the clock's configuration. Setting the clock's LNKMNNU / FOB MD option to VALET will enable this mode.

---

# 6

# Fonts

---

The clock can display digits in a variety of fonts, from the standard one to ones that are funky or downright weird. This chapter provides illustrations of the fonts which can be selected, in order to help you pick the one that suits you best. A complete list is also available from the clock itself in the configuration menu.

Please note that the segments shown in the following illustrations are deliberately shortened in order to make it obvious where one ends and another begins. In actual operation, these will look like completed lines from one edge to the other. Each font shown below represents the numbers 0-4 across the top line and 5-9 across the bottom line.

---

## 6.1 Quick selection of fonts

It is possible to directly select the font the clock uses from within the font catalog, so if you see a font you'd like to try you can select it here. Simply do a long press of the control knob while a font sample (not a font name) is displaying. After a short period, the display will show a "SETFNT" message. When you release the knob, the message will change to "CONFRM". Perform another long press to select this font, or rotate the knob one click to "ABORT" the font selection and return to the font catalog.


---

## 6.2 The font catalog

---

### 6.2.1 STNDRD


This is the standard font for the clock. While it might be considered rather boring (particularly compared with some of the other fonts in the clock), it maximizes readability.

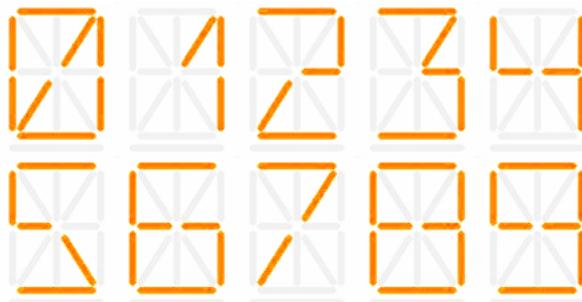

## Fonts


---

### 6.2.2 ALIEN

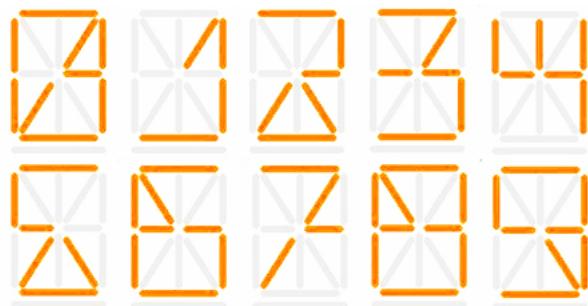


---

### 6.2.3 STINGY

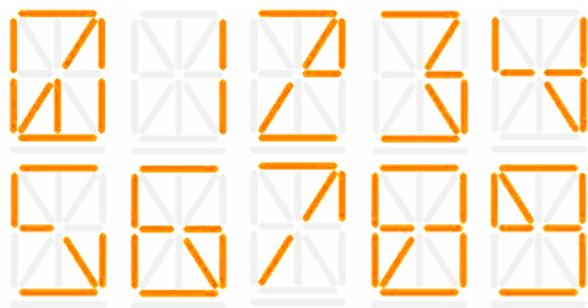


---


### 6.2.4 OUTLND

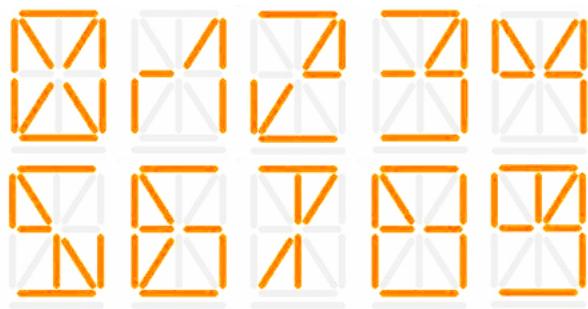


---

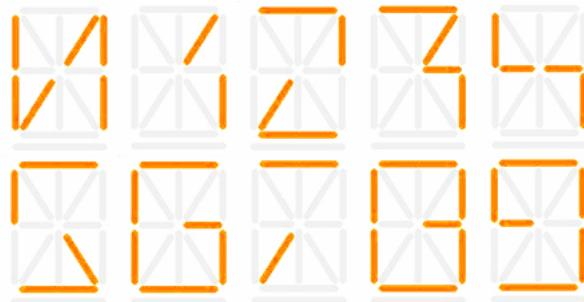**6.2.5 STOLEN**

---

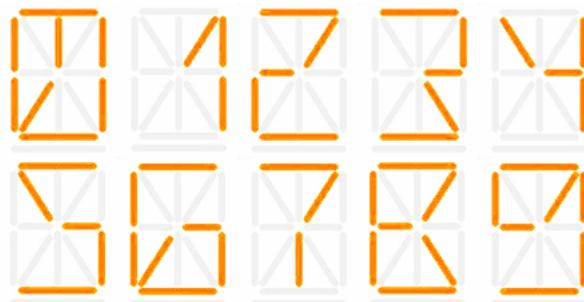**6.2.6 GRUNGE**


---

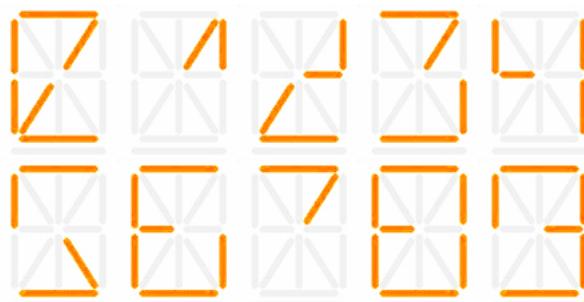**6.2.7 WITHER**

## Fonts


---

### 6.2.8 SKEWED

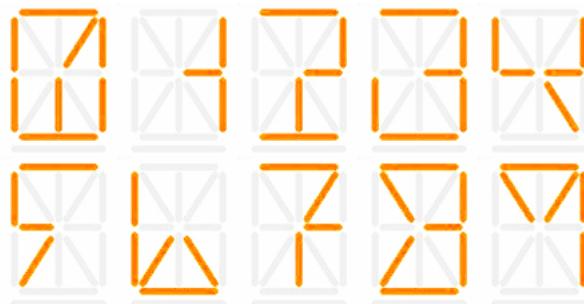


---

### 6.2.9 NICE 1

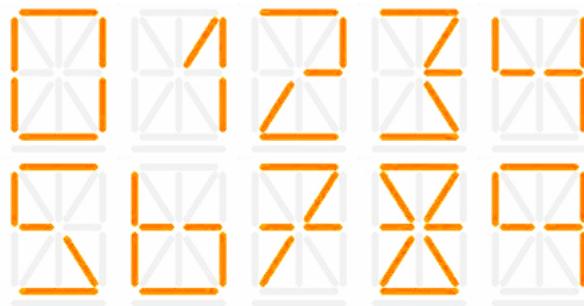

---


### 6.2.10 DECO 1

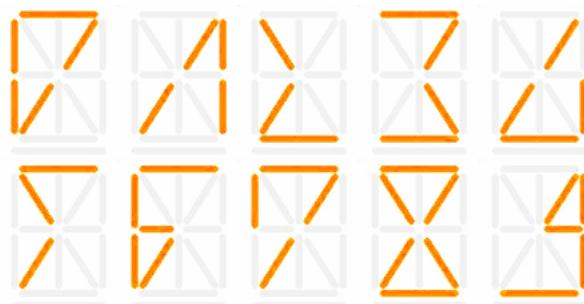

---

### 6.2.11 7 SEG


This is the standard 7-segment font found on many display devices over the years.

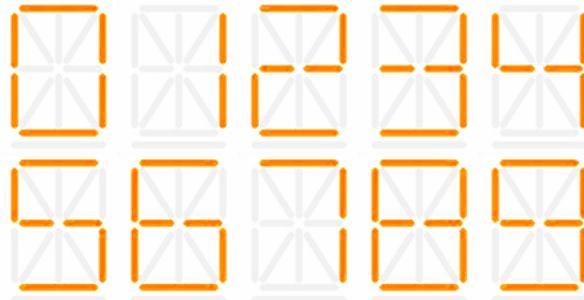

---

### 6.2.12 B7971


This is the font that these tubes used when they were in service as stock quote tickers.

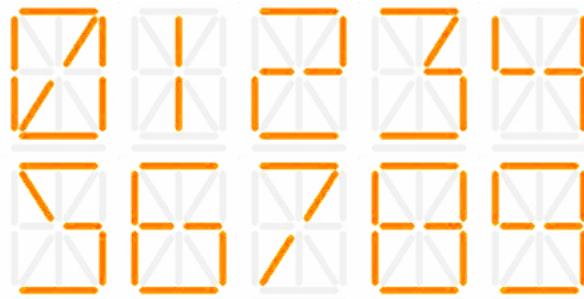

---

### 6.2.13 MIRROR


This is the STNDRD font, but in reverse.

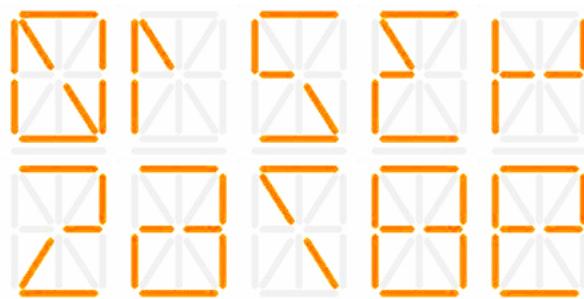

## Fonts


---

### 6.2.14 TILTNE

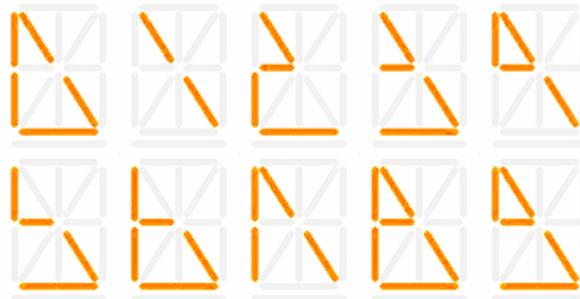


---

### 6.2.15 TILTSW

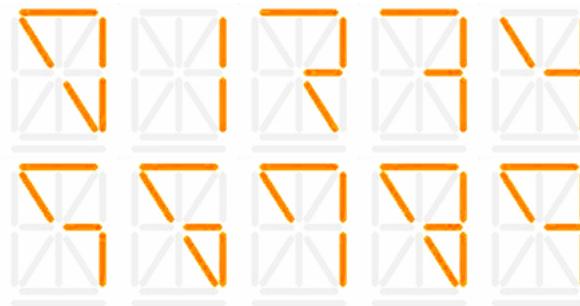

---


### 6.2.16 TILTNW

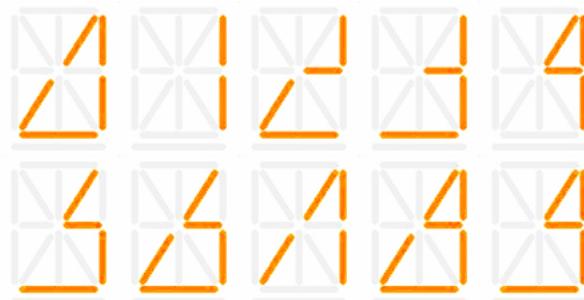


---

**6.2.17 TILTSE**

---

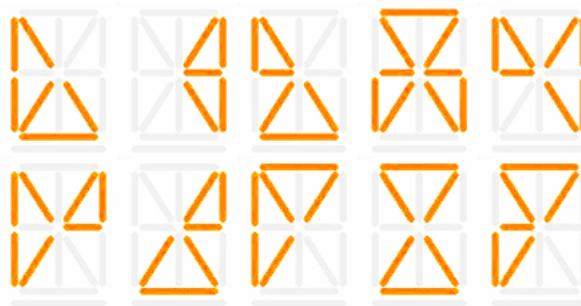**6.2.18 TRIANG**

---

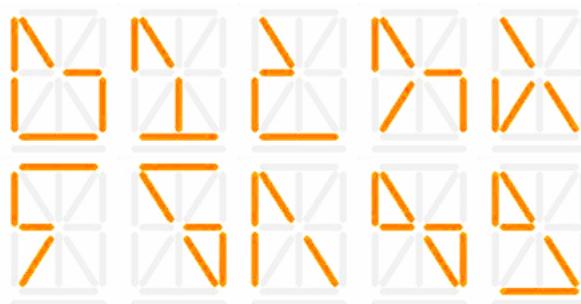**6.2.19 SKEWUP**

---

## Technology and History

The tubes used in this clock have a fascinating history and you can read more about them on the web. We've included a little background here to get you started.

---

### 7.1

#### Nixie tubes in general

The display tubes are called "Nixie tubes", which were introduced in 1955. The basic method of operation is the same as of a neon light bulb (not the same as a neon sign), where applying electricity causes an orange glow to form around a wire inside the tube. Most tubes had wire elements in the shapes of the digits 0 through 9. The tubes in this clock are unusual in that they have 15 wire segments which can be combined to display letters as well as numbers. Despite being called tubes, Nixies do not contain the heating element that most other electron tubes use. Therefore, they run quite cool and efficiently.

After a number of years where various oddball technologies tried to take over from Nixie tubes, the first practical replacement came in the early 1970's with the LED (light emitting diode) display. LEDs were cheaper to manufacture, were much easier to connect to other electronics, and (later) came in a variety of colors. Depending on the desired use, other technologies also appeared around the same time - LCDs (liquid crystal displays) and VFDs (vacuum fluorescent displays). Some types of Nixie tubes continued to be sold as new until the mid-2000's, though they were actually older stock marked with later dates. For lots of information about every possible display technology, visit the web site of The Vintage Technology Association at <http://www.decadecounter.com>

---

### 7.2

#### The tubes in this clock

The tubes in this clock, which were manufactured from 1964-1968, were used in the "LECTRASCAN" stock ticker system found in major brokerage firms. When those systems were decommissioned, a few tubes were saved by collectors. 6 of them have now made their way into this clock for your enjoyment. As genuine antiques, they are quite rare and now cost over \$100 each. They are among the largest Nixie tubes ever produced.

**Figure 7–1** Newspaper advertisement from January, 1966

# To serve you better...

**Figure 7–2** A LECTRASCAN display frame with 48 tubes



**7.3****Other technology**

The rest of the components in the clock are the latest technology, unheard of in the 1960's. The CPU that runs this clock is more powerful in many ways than the fastest computer from that era. The components are microminiature (the technical term is SMT) and the programs that run the clock and the GPS repeater can be easily upgraded if needed (for example, to add new features).

---

# 8

## "Geek" stuff

---

This chapter contains some information that most people won't care about, but if you're interested in learning some more technical details about the clock, read on...

---

### 8.1

#### The GPS repeater

The GPS repeater communicates with the clock on the license-free 2.4GHz radio band. These frequencies are shared with Wi-Fi networks, cordless phones, baby monitors, and even microwave ovens. The range of the repeater will vary depending on which of these are nearby. The repeater can be set to any of up to 128 channels (depending on country) to avoid interference with these other gadgets - see the configuration options section. In the United States the allowed channels are 1 through 79.

Use of the GPS repeater is optional. On GEN II CPUs you can also plug a GPS receiver directly into the connector on the back of the clock (side closest to the control knob). If you use a direct connection to the clock, you will need to set the GPSMNU / GPS MD option to SERIAL, and optionally change the SYSMNU / LED MD option to RMCRCV. When using a directly-connected GPS receiver, environmental sensor display is not available (see the following section).

---

### 8.2

#### Environmental sensors

Displaying the temperature and optional barometric pressure / relative humidity sensor data is only possible when using the optional GPS repeater, not when a GPS receiver is plugged directly into the clock. This is because those sensors are located in the GPS repeater, not the clock itself.

---

### 8.3

#### Power-on segment test

A power-on test is available for testing the tubes and basic clock components such as the power supply and tube drivers. This test will operate even if major sections of the CPU board such as the radio module and clock chip are non-functional. While mostly of interest to people assembling the clock from kits, you may find it useful if your clock stops working or fails to operate normally when first installed for some reason. For normal tube testing, the SYSMNU / SEGTST menu option provides greater flexibility.

To activate the power-on segment test, press and hold the control knob while connecting the power cord to the clock. The tubes should cycle through a pattern of lighting one segment at a time, then the lower half of each colon and the AM/PM lamp, then the upper half of each colon, then all segments, colons and AM/PM lit, then all off. The pattern will repeat until power is disconnected. While in this test mode, the control

knob is ignored. To exit, simply disconnect the power, wait a moment, and reconnect the power without pressing the control knob.

**Note:** The "power on" neon lamp on the left side of the clock will always remain lit to show that power is still applied to the clock.

---

## 8.4

### Service information

For information on servicing the clock, consult the MOD-6 Google Group at [http://groups.google.com/group/mod-6\\_7971](http://groups.google.com/group/mod-6_7971)

# A

## Default configuration options

---

This appendix lists the default configuration options that the clock ships with. They can be restored via the PROFLE / FACTRY menu option.

TIME	(set by GPS)
DAY	(set by GPS)
FONT	STNDRD
DATE	(set by GPS)
MONTH	(set by GPS)
YEAR	(set by GPS)
DIM	20
BRIGHT	90
LVLSET	15
DOT MD	BLINK
AM/PM	ON
XFADE	24
DATEMD	1 MIN
DATDLY	16
DATSCR	FADE
YEAR D	ON
DAY D	ON
12/24	12 HR
LZ SUP	ON
LDRTST	(display only)
FNTCAT	(display only)
TUBETM	(display only)
GPSMNU	
GPS MD	RF-LNK
TMZONE	-05:00
TWEAK	0
ULCK I	-----
ULCKTM	120
TRKTOL	MEDIUM
SNCMSG	ON
INIT	ON
SYSMNU	
QWKSEL	WORDS
UI TMR	30

## Default configuration options

DSPFNT	TIME F
SEGTST	(display only)
LED MD	RF RCV
SECNDS	ON
MSGs	ON
SCRLSP	1
SCRLXF	4
PWMVAL	28KHZ
ENCDIR	CW
RTCAGE	0
EXP MD	OFF
TMRMNU	
TMR MD	OFF
TM1OFF	00:00:00
TM1 ON	00:00:00
TM2OFF	00:00:00
TM2 ON	00:00:00
MON	TMR1
TUES	TMR1
WEDS	TMR1
THUR	TMR1
FRI	TMR1
SAT	TMR1
SUN	TMR1
QWKSET	TIMER
DSTMNU	
DST MD	ON
B TIME	02:00:00
B MNTH	MAR
B NTH	SECOND
B DAY	SUNDAY
E TIME	02:00:00
E MNTH	NOV
E NTH	FIRST
E DAY	SUNDAY
OFFSET	+01:00
LNKMNU	
RFCHAN	77
RFBAUD	250K
FOB MD	ON

ADDR	0
RPRRMT	ON
DIMMNU	
DATE	ON
SECNDS	SAME
DOT MD	SAME
LED MD	SAME
MET	ON
WORDS	ON
METMNU	
MET MD	1 MIN
F/C	FAHR
HG/MB	IN HG
BTREND	TEXT
S1 LBL	BLANK
T1 CAL	0
H1 CAL	0
B1 CAL	0
S2 LBL	-B-
T2 CAL	0
H2 CAL	0
B2 CAL	0
S3 LBL	-C-
T3 CAL	0
H3 CAL	0
B3 CAL	0
S4 LBL	-D-
T4 CAL	0
H4 CAL	0
B4 CAL	0
CLKSTA	OFF
H SUFF	RH
HEAR D	OFF
DSPDLY	20
WRDMNU	
WRD MD	1 MIN
NWORDS	1
LEXICN	ALL
DIRTY	OFF
EFFECT	RNDLET

## **Default configuration options**

LETDLY	16
SEGDLY	6
WRDDLY	32
BKENDS	OFF
PROFLE	CANCEL

# B

## GPS initialization strings

---

The following are the initialization strings sent to a directly connected GPS receiver by the clock at power-on. The information shown in parenthesis is not sent - it just explains what the strings do.

\$PSRF103,00,00,00,01*24<CR><LF>	(GGA off)
\$PSRF103,02,00,00,01*26<CR><LF>	(GSA off)
\$PSRF103,03,00,00,01*27<CR><LF>	(GSV off)
\$PSRF103,08,00,00,01*2C<CR><LF>	(ZDA off)
\$PSRF103,05,00,00,01*21<CR><LF>	(VTG off)
\$PSRF103,06,00,00,01*22<CR><LF>	(MSS off)
\$PSRF103,01,00,00,01*25<CR><LF>	(GLL off)
\$PSRF103,04,00,01,01*21<CR><LF>	(RMC on, 1Hz report rate)

**Note:** <CR> and <LF> represent the carriage return and linefeed characters.

# C

## Operating multiple clocks

---

The normal user environment has a single clock and a single GPS repeater. In this situation, the pairing procedure described in Section 4.1.2 is sufficient to pair the clock with its GPS repeater. More complex arrangements are possible, however, and in those cases special care should be taken to avoid interference between the two (or more) clocks. There are two ways of handling multiple clocks:

### C.1

#### Multiple clocks, multiple GPS repeaters

This is probably the easiest solution. Each clock will have its own GPS repeater and will receive signals from only that repeater. To operate in this mode, simply configure each clock on a different RF channel.

**Note:** We recommend leaving a gap of at least 2 channels between the channels you use - for example, 79 and 82. This will eliminate the possibility of interference between the closely-spaced channels.

Since the GPS repeater will pair with the first clock it discovers during its scan, power up only the first clock and its repeater, then pair it with its repeater. Then power that clock and repeater off and the next set of clock and repeater on, and pair that one with its repeater. Repeat as needed. Once each clock has been paired with its own repeater, all clocks and repeaters can be powered on and will operate normally, each clock receiving data from its individual repeater.

### C.2

#### Multiple clocks, single GPS repeater

Another possible mode uses a single GPS repeater to provide the time and temperature information to a number of clocks simultaneously. This provides some cost savings as additional GPS repeaters and GPS receivers are not needed, but is limited to the distance at which each clock can receive a good signal from the GPS repeater. You will need to experiment with different locations for the GPS repeater to find the one that works best (or at all) for multiple clocks.

To operate in this mode, configure all clocks for the same RF channel and baud rate. Next, power off all but one of the clocks and pair the repeater with that clock as usual. Once paired, you may power on the remaining clocks and they should all receive data from the one repeater. Do not attempt to re-pair the repeater with the additional clocks. It is not necessary and will usually be unsuccessful, as multiple clocks will try to respond simultaneously which will confuse the repeater.

### C.2.1 Notes on the single repeater configuration

There are a number of things that it is important to be aware of when using multiple clocks with a single GPS repeater.

- If more than one clock is visible, they may update their display at slightly different intervals. You can use the GPSMNU / TRKTOL option to synchronize them more closely to each other if this becomes distracting.
- The GPS repeater sends several words to the clocks and the clocks use a random algorithm to select one of the words matching the configured criteria (for example, 4-letter, 6-letter, or both). With one GPS repeater providing words to all of the clocks, there is an increased chance of the same "random" word showing up on more than one clock at the same time.
- Since all clocks are receiving environmental data (temperature, humidity, barometric pressure, etc.) from a single GPS repeater, the data displayed on all of the clocks will be the data from where the repeater is located, not the data where the clock is. If this becomes confusing, you can disable the environmental data display on any of the clocks via the METMNU / MET MD option.
- If there is a power failure or for some other reason multiple clocks are turned on at the same time, you may experience a "PING storm" where each clock reports to the others that it heard a wakeup packet from the other. The duration of this storm will vary depending on the number of clocks on the same RF channel. In tests with 5 clocks, the storm subsided in well under a minute and all clocks went back to displaying normally.

### C.2.2 Using keyfobs with multiple clocks and a single repeater

If you have multiple clocks all operating on the same LNKMNU / RFCHAN, you can still individually control them with separate keyfobs by setting each clock and keyfob to a different LNKMNU / ADDR. 8 addresses are available, numbered 0 through 7. A clock will only respond to a keyfob set to the same address, even if there are other keyfobs operating on the same RF channel. Other combinations of clocks and keyfobs are possible - you can set more than one clock to the same LNKMNU / RFCHAN and control them with a single keyfob.

# D

## Configuring timer mode

---

The clock has two timers numbered 1 and 2 which control when the tubes are on and when they are off. This allows enhanced flexibility as various schedules can be configured. As the tubes are old and hard to obtain, some users may desire to have them turned off when there is nobody around to see them.

One possibility is to set the DIM menu option to zero and the LVLSET option to a value that reflects the actual lighting level when the room is occupied. For example, if a light is always lit in the room when it is in use, then (with an appropriate setting of LVLSET), the clock display will turn off when the room light is turned off. You can also use the left and right buttons on the optional keyfob to manually turn the clock display off and on. You may also set the TMRMNU / QWKSET option to DISP to perform the same action using the control knob on the clock.

The timers are used for more advanced situations as described in the sections below. In each of the examples, TMR MD should be set to ON to enable the timer function.

If you set the TMRMNU / QWKSET option to TIMER you can override the timer function by rotating the control knob on the clock or by using the up and down buttons on the optional keyfob. When you override the timer function in this manner the timer will resume at the next scheduled timer operation. In other words, it is a temporary override. You can disable timer operation by changing the TMR MD setting to OFF.

**Note:** Brightness levels slowly ramp up and down to target levels, allowing time for the final brightness level to be reached.

**Note:** The "power on" neon lamp on the left side of the clock will always remain lit to show that power is still applied to the clock.

**Note:** When setting the timers, if you have configured the clock for 12-hour display mode, make sure that you have selected the correct time by checking the AM/PM indicator light when setting the hours. The examples below all assume 24-hour display mode for simplicity.

These examples are just ideas to get you started and explain the timer concepts. Feel free to experiment with more sophisticated configurations.

---

### D.1

#### Office use, 9 to 5 weekdays only

For this usage, set TM1OFF to 17:00:00 and TM1 ON to 09:00:00. Leave TM2OFF and TM2 ON at 00:00:00. Set the MON through FRI options to TMR1. Set the SAT and SUN options to NX OFF.

## **Configuring timer mode**

**D.2**

### **Office use, 9 to 5 weekdays, 10 to 2 Saturdays**

This usage is a simple extension of the previous example. Set all options as in the previous example, except TM2OFF should be set to 14:00:00 and TM2 ON to 10:00:00. Set SAT to TMR 2.

**D.3**

### **Home use, off when at work**

This example is similar to the first example, except that the ON / OFF times are reversed. Set TM1OFF to 08:30:00 (or whatever time you normally leave the house for work) and TM1 ON to 17:30:00 (or whatever time you return home). Set the MON through FRI options to TMR 1 and the SAT and SUN options to NX ON.

# E

## A note about display sequence and overcrowding

---

It is possible to "overcrowd" the display to the extent that the time is only visible for a short period, if at all. When enabling display options the user should be mindful of the amount of time each item will be displayed. Items will be displayed in the following order (assuming the relevant options are enabled).

- 1 Day name
- 2 Month and day
- 3 Year
- 4 Sensor 1 temperature
- 5 Sensor 1 humidity
- 6 Sensor 1 barometric pressure
- 7 Sensor 1 barometric trend
- 8 Sensor 2 temperature
- 9 Sensor 2 humidity
- 10 Sensor 2 barometric pressure
- 11 Sensor 2 barometric trend
- 12 Sensor 3 temperature
- 13 Sensor 3 humidity
- 14 Sensor 3 barometric pressure
- 15 Sensor 3 barometric trend
- 16 Sensor 4 temperature
- 17 Sensor 4 humidity
- 18 Sensor 4 barometric pressure
- 19 Sensor 4 barometric trend
- 20 Random word 1
- 21 Random word 2
- 22 Random word 3
- 23 Random word 4
- 24 Random word 5

## A note about display sequence and overcrowding

While it can be tempting to "turn everything on" to see all of the interesting data that is displayed, it can become somewhat overwhelming to the casual observer (who probably just wants to know what time it is). Experiment with enabling options selectively in order to see what works best for you. Also, the various displays can be suppressed when the clock is in dim mode (see DIMMNU) to avoid distraction in low-light / nighttime environments.

**Note:** If word display is enabled and any of the random options for words are selected, it is not possible to determine exactly how long a complete display cycle will take.

---

§ *Terminat hora diem, terminat auctor opus*